

**Total Maximum Daily Load Document
CW-243, Big Branch Watershed
Hydrologic Unit Code 030501110106
Fecal Coliform Bacteria,
Indicator for Pathogens**



April 2010

SCDHEC Technical Report Number: 07J-13

Prepared for:

Bureau of Water



Prepared by:

Banu Varlik

Abstract

§303(d) of the Clean Water Act (CWA) and EPA's Water Quality Planning and Management Regulations (40 CFR Part 130) require states to develop total maximum daily loads (TMDLs) for water bodies that are not meeting designated uses under technology-based pollution controls. A TMDL is maximum amount of pollutant a waterbody can assimilate while meeting water quality standards for the pollutant of concern. All TMDLs include a wasteload allocation (WLA) for all National Pollutant Discharge Elimination System (NPDES)-permitted discharges, a load allocation (LA) for all nonpoint sources, and an explicit and/or implicit margin of safety margin of safety (MOS). A fecal coliform TMDL was developed for station number CW-243 within the Big Branch watershed located in Clarendon County, SC. One station along Big Branch in Clarendon County, SC is listed as impaired on the State's 2006 §303(d) list due to excessive fecal coliform numbers documented during the 2000-2005 assessment period.

Big Branch watershed is predominantly forest or agriculture lands. There are no NPDES permitted sanitary waste dischargers and no MS4 outfalls within the watershed. Probable sources of fecal contamination include agricultural runoff, failing septic systems and wildlife. The load-duration curve methodology was used to calculate existing and TMDL loads for the impaired segment. Existing pollutant loadings and proposed TMDL reductions for critical hydrologic conditions are presented in Table Ab-1. Critical hydrologic conditions were defined as either moist, mid-range, or dry depending on which condition demonstrated the highest load reductions necessary to meet water quality standards. In order to achieve the target load (slightly below water quality standards) for the Big Branch, reductions in the existing loads of up to 75% will be necessary. Compliance with terms and conditions of existing and future NPDES sanitary and stormwater permits (including all construction, industrial and MS4) will effectively implement the WLA and demonstrate consistency with the assumptions and requirements of the TMDL. For SCDOT, compliance with terms and conditions of its NPDES MS4 permit is effective implementation of the WLA to the Maximum Extent Practicable. Required load reductions in the LA portion of this TMDL can be implemented through voluntary measures.

The Department recognizes that **adaptive implementation** of this TMDL (i.e. WLA and LA) might be needed to achieve the water quality standard and we are committed towards targeting the load reductions to improve water quality in the Big Branch Watershed. As additional data and/or information become available, it may become necessary to revise and/or modify the TMDL target accordingly.

Table Ab-1. Total Maximum Daily Loads for the Big Branch Watershed. Loads are expressed as colony forming units (cfu) per day.

Station	Existing Load (cfu/day)	TMDL (cfu/day)	Margin of Safety (cfu/day)	Wasteload Allocation (WLA)			Load Allocation (LA)	
				Continuous Sources ¹ (cfu/day)	Non-Continuous Sources ^{2,4} (% Reduction)	Non-Continuous SCDOT ^{3,4} (% Reduction)	Load Allocation (cfu/day)	%Reduction to Meet LA ⁴
CW-243	3.21E+11	8.28E+10	4.14E+09	N/A	75 %	0 %	7.87E+10	75 %

Table Notes:

1. WLAs are expressed as a daily maximum; NA = not applicable, no point sources. Existing and future continuous discharges are required to meet the prescribed loading for the pollutant of concern. Loadings were developed based upon permitted flow and an allowable permitted maximum concentration of 400cfu/100ml.
2. Percent reduction applies to all NPDES-permitted stormwater discharges, including current and future MS4, construction and industrial discharges covered under permits numbered SCS & SCR. Stormwater discharges are expressed as a percentage reduction due to the uncertain nature of stormwater discharge volumes and recurrence intervals. Stormwater discharges are

required to meet percentage reduction or the existing instream standard for pollutant of concern in accordance with their NPDES Permit.

3. As long as the conditions within the SCDOT MS4 area remain the same the Department deems the current contributions from SCDOT negligible and no reduction of FC bacteria is necessary. SCDOT must continue to comply with the provisions of its approved NPDES stormwater permit.
4. Percent reduction applies to existing instream load.

Contents

1.0 INTRODUCTION	1
1.1 Background.....	1
1.2 Watershed Description.....	1
1.3 Water Quality Standard.....	4
2.0 WATER QUALITY ASSESSMENT	5
3.0 SOURCE ASSESSMENT AND LOAD ALLOCATION.....	6
3.1 Point Sources	7
3.1.1 Continuous Point Sources.....	7
3.1.2 Non-Continuous Point Sources	7
3.2 Nonpoint Sources.....	8
3.2.1 Wildlife.....	9
3.2.2 Agricultural Activities	9
3.2.3 Leaking Sanitary Sewers and Illicit Discharges	10
3.2.4 Failing Septic Systems	10
3.2.5 Urban Runoff	10
4.0 LOAD-DURATION CURVE METHOD.....	11
5.0 DEVELOPMENT OF TOTAL MAXIMUM DAILY LOAD.....	12
5.1 Critical Conditions.....	13
5.2 Existing Load	13
5.3 Wasteload Allocation.....	13
5.3.1 Continuous Point Sources.....	13
5.3.2 Non-Continuous Sources	13
5.4 Load Allocation	14
5.5 Seasonal Variability.....	14
5.6 Margin of Safety	15
5.7 TMDL	15
6.0 IMPLEMENTATION	16
6.1 Implementation Strategies	17
6.1.1 Continuous Point Sources.....	17
6.1.2 Non-Continuous Point Sources	17
6.1.3 Wildlife.....	19
6.1.4 Agricultural Activities	19
6.1.5 Leaking Sanitary Sewers and Illicit Discharges	20
6.1.6 Failing Septic Systems	21
6.1.7 Urban Runoff	21

7.0 RESOURCES FOR POLLUTION MANAGEMENT	22
7.1 General for Urban and Suburban Stormwater Mitigation	22
7.2 Illicit Discharges.....	23
7.3 Pet Waste	23
7.4 Wildlife	24
7.5 Septic Systems.....	24
7.6 Field Application of Manure	24
7.7 Grazing Management.....	25
7.8 Animal Feeding Operations and Barnyards	25
7.9 Federal Agriculture Resources: Program Overviews, Technical Assistance, and Funding	25
8.0 REFERENCES AND BIBLIOGRAPHY	27

List of Appendices

Appendix A DATA TABLES

Appendix B PHOTOGRAPHS FROM THE WINDSHIELD SURVEY CONDUCTED ON MARCH 31, 2008

Appendix C EVALUATING THE PROGRESS OF MS4 PROGRAMS

List of Tables

Table Ab-1. Total Maximum Daily Loads for the Big Branch Watershed. Loads are expressed as colony forming units (cfu) per day.	ii
Table 1. Big Branch Watershed Fecal Coliform Impaired Waters.....	1
Table 2. Big Branch Watershed Land Use (derived from NLCD 2001).	4
Table 3. Fecal Coliform WQS Exceedances Summary for Station CW-243 (2001-2005).....	5
Table 4. Percent Reduction Necessary to Achieve Target Load by Hydrologic Category.	13
Table 5. Percent Reduction Necessary to Achieve Target Load.	14
Table 6. TMDL Components for the Fecal Coliform Impaired Segments in the Big Branch Watershed. Loads are expressed as colony forming units (cfu) per day.	15

List of Figures

Figure 1. SCDHEC Monitoring Station CW-243 Impaired due to excessive FC numbers	2
Figure 2. SCDHEC Impaired Monitoring Station CW-243 Land Use	3

Figure 3. Fecal coliform and precipitation data by date for station CW-243 on Big Branch.....	6
Figure 4. SCDOT owned and operated roads within the Big Branch watershed	8
Figure 5. Load Duration Curve for Big Branch Station CW-243	12
Figure 6. TMDL component for the fecal coliform impaired segments in the Big Branch watershed.....	15

1.0 INTRODUCTION

1.1 Background

Fecal coliform bacteria are widely used as an indicator of pathogens in surface waters and wastewater. Acute gastrointestinal illnesses affect millions of people in the United States and cause billions of dollars of costs each year (Gaffield et al. 2003). Of these illnesses many are caused by contaminated drinking water. Untreated stormwater runoff has been associated with a number of disease outbreaks, most notably an outbreak in Milwaukee that caused many deaths in 1993.

Though occurring at low levels from natural sources, the concentration of fecal coliform bacteria can be elevated in water bodies as the result of pollution. Sources of fecal coliform bacteria are usually diffuse or nonpoint in nature and originate from stormwater runoff, failing septic systems, agricultural runoff, leaking sewers among other sources. Occasionally, the source of the pollutant is a point source. Section 303(d) of the Clean Water Act (CWA) and Environmental Protection Agency's (EPA) Water Quality Planning and Management Regulations (40 CFR Part 130) require states to develop TMDLs for water bodies that are not meeting designated uses under technology-based pollution controls. The TMDL process establishes the allowable loading of pollutants or other quantifiable parameters for a water body based on the relationship between pollution sources and in stream water quality conditions so that states can establish water quality-based controls to reduce pollution and restore and maintain the quality of water resources (USEPA 1991).

The State of South Carolina has placed one monitoring station in the Big Branch watershed on South Carolina's Section 2008 §303(d) list for impairment due to fecal coliform bacteria (SCDHEC 2008). Station CW-243 is identified on Table 1 and Figure 1.

Table 1. Big Branch Watershed Fecal Coliform Impaired Waters.

Waterbody	Station Number	Description
Big Branch	CW-243	Big Branch at S-14-41 (SC-047)

1.2 Watershed Description

The headwater of Big Branch is located due south of town of Pinewood and west northwest of town of Summerton. Big Branch flows in a north to south direction towards Jacks Creek which confluences with Lake Marion and is located in Santee River Basin. The Big Branch watershed (HUC 030501110106) drains approximately 14.15 mi² (9055 acres) and is the only major tributary in the watershed (Figure 1). Spring Branch converges with Big Branch approximately 270 feet above station CW-243.

Land use within the watershed is predominately agricultural (36.02 %) and forests (21.86 %) (Table 2) (Figure 2). Developed land use is approximately 3.3 % of the total watershed area as determined by the 2001 National Land Cover Data Set (NLCD 2001).

Figure 1. SCDHEC Monitoring Station CW-243 Impaired due to Excessive Fecal Coliform Numbers.

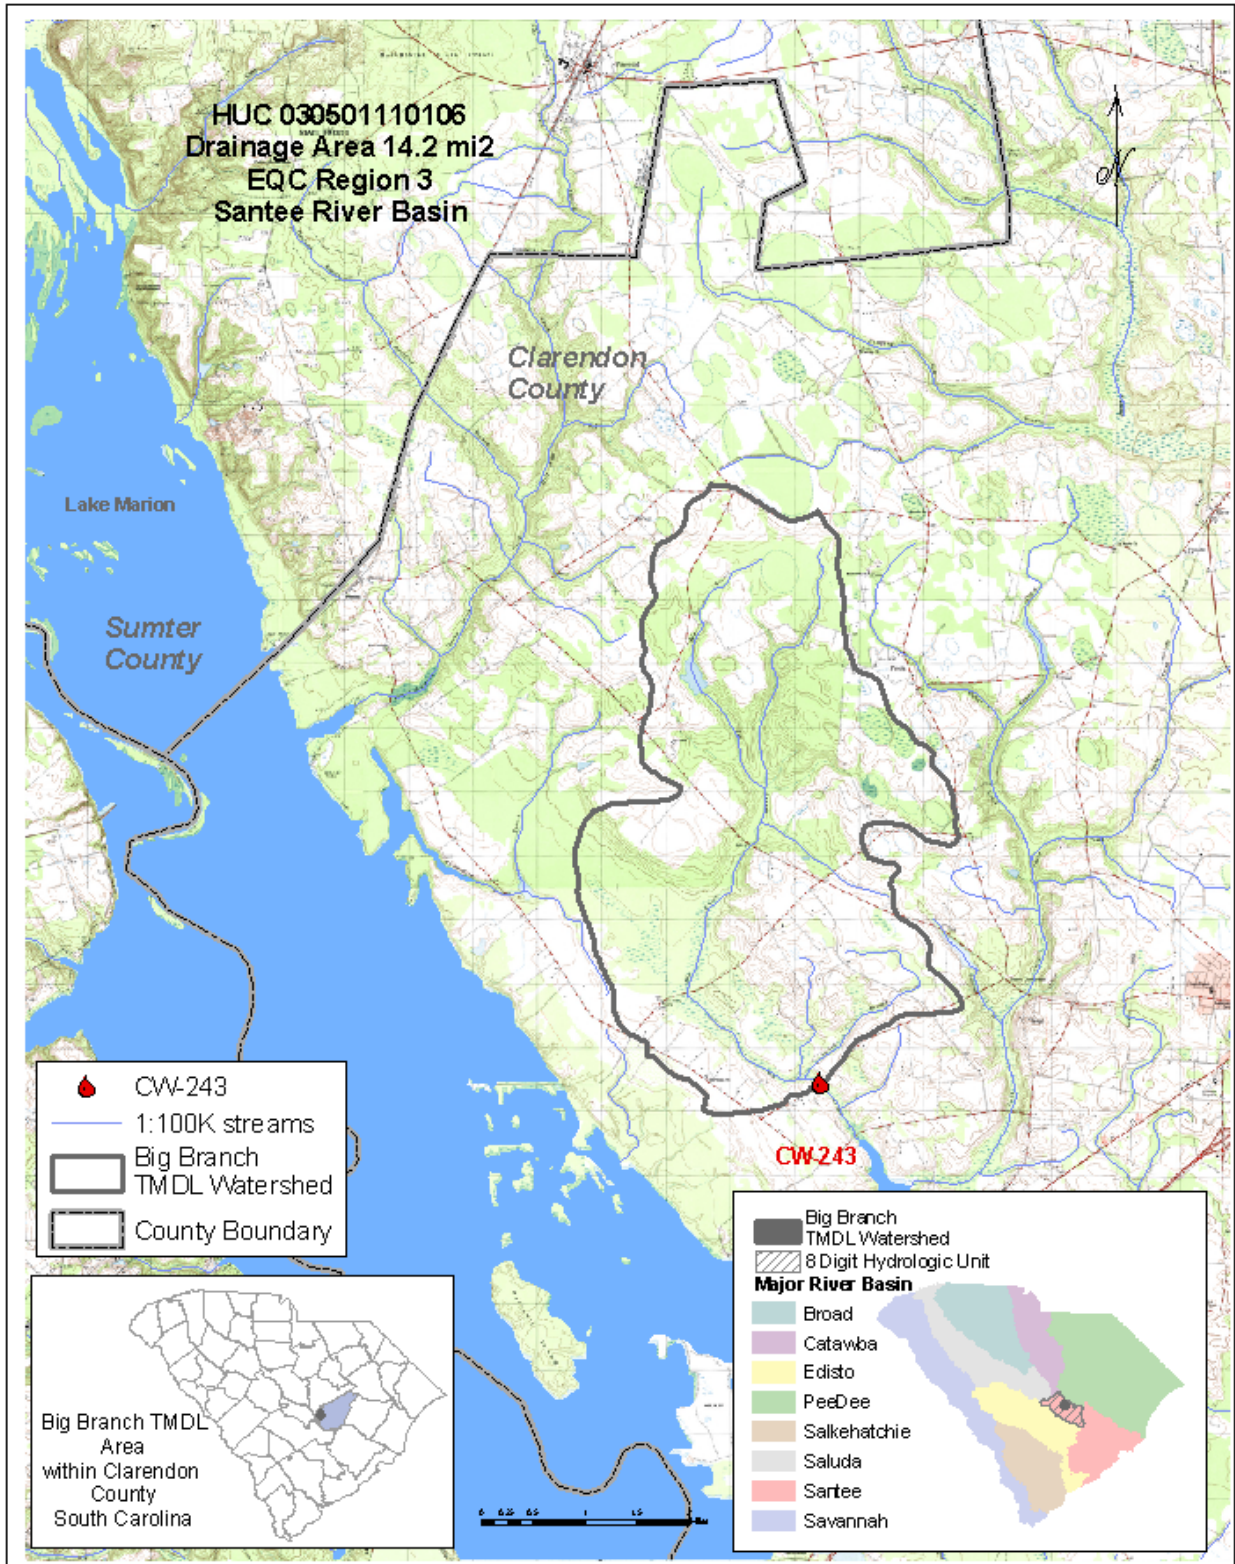


Figure 2. SCDHEC Impaired Monitoring Station-CW-243 Land Use

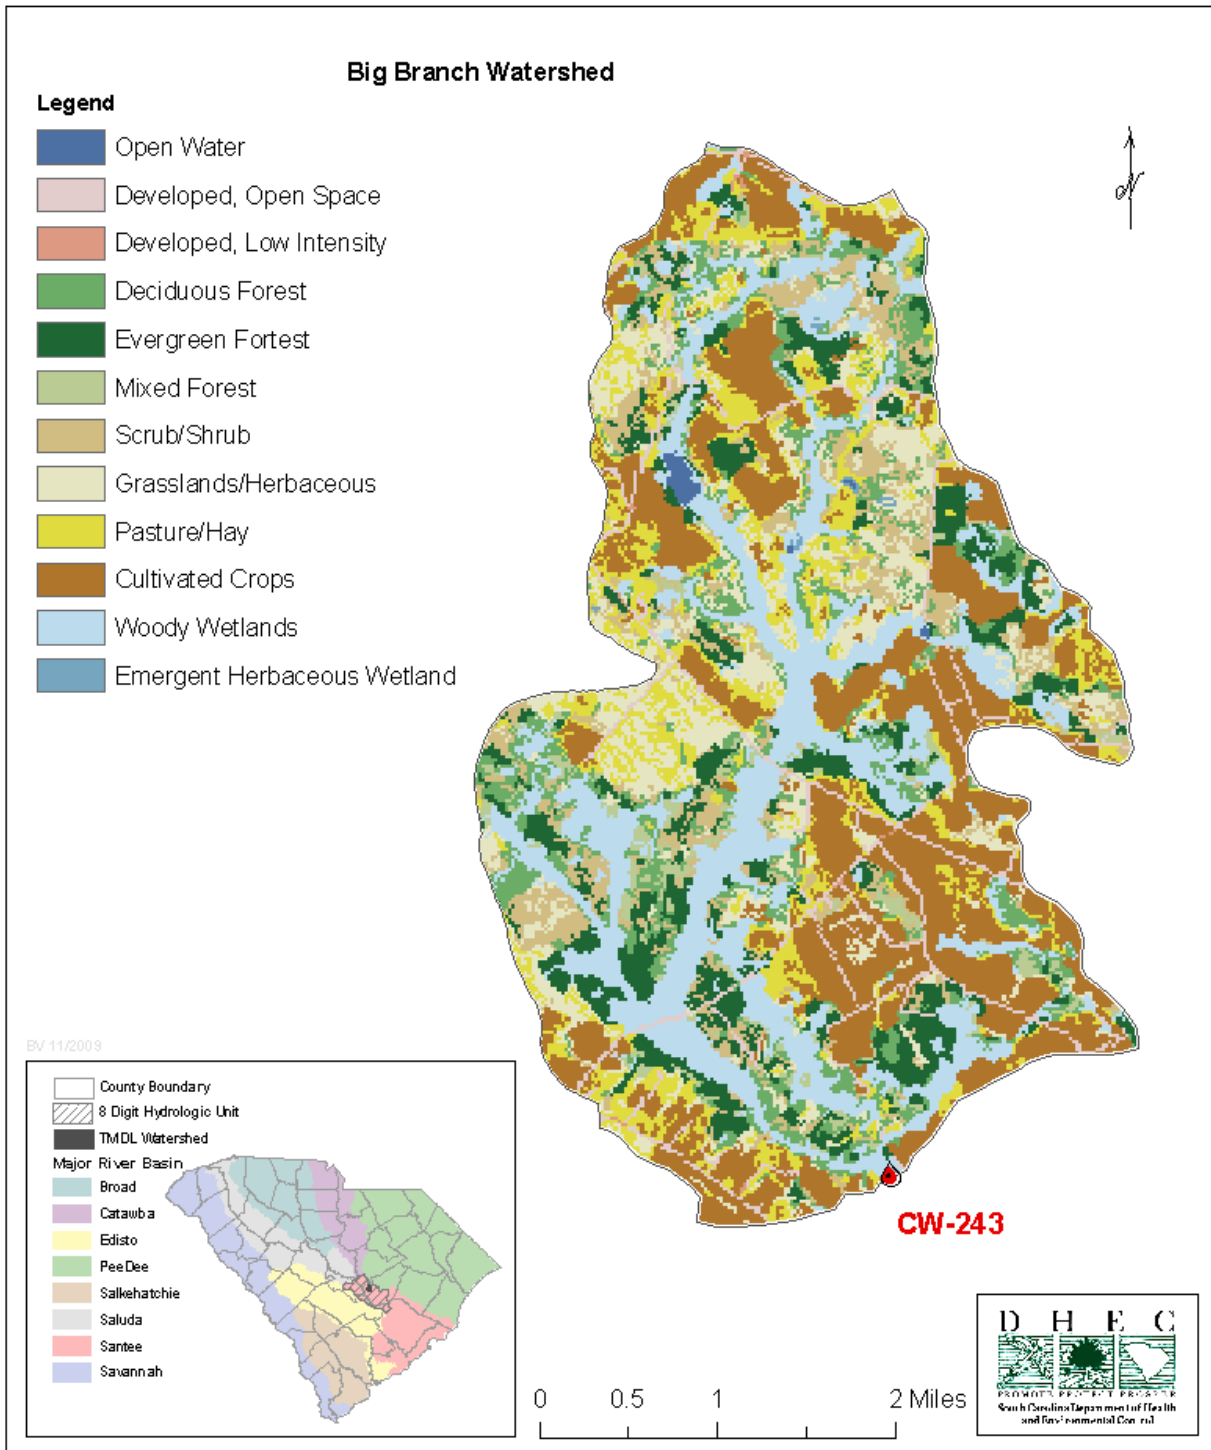


Table 2. Big Branch Watershed Land Use (derived from NLCD 2001).

Land Use	Big Branch Watershed (mi²)	Big Branch Watershed (ac)	Big Branch % of total area
Developed, Low Intensity	0.01	6.4	0.1
Developed, Open Space	0.46	294.4	3.28
<i>Total Developed</i>	<i>0.47 mi²</i>	<i>300.8 ac</i>	<i>3.29 %</i>
Woody Wetlands	2.67	1708.8	18.85
Emergent Herbaceous Wetland	0.02	12.8	0.11
Open Water	0.04	25.6	0.29
<i>Total Wetlands/Open Water</i>	<i>2.73 mi²</i>	<i>1747.2 ac</i>	<i>19.25 %</i>
Mixed Forest	0.38	243.2	2.7
Deciduous Forest	1.28	819.2	9.03
Evergreen Forest	1.43	915.2	10.13
<i>Total Forested</i>	<i>3.09 mi²</i>	<i>1977.6 ac</i>	<i>21.86 %</i>
Cultivated Crops	3.43	2195.2	24.22
Pasture/Hay	1.67	1068.8	11.80
<i>Total Agricultural</i>	<i>5.1 mi²</i>	<i>3264.0 ac</i>	<i>36.02 %</i>
Grassland/Herbaceous	1.56	998.4	11.02
Scrub/Shrub	1.2	768.0	8.46
<i>Total Other</i>	<i>2.76 mi²</i>	<i>1766.4 ac</i>	<i>19.48 %</i>
Totals	14.15 mi²	9056.0 ac	100.0 %

1.3 Water Quality Standard

The impaired stream segments of the Big Branch basin is designated as “Freshwater” in Water Classifications and Standards SCDHEC, 2004. Regulation 61-68 (SCDHEC, 2004b) describes “Freshwater” as follows:

“Freshwaters are suitable for primary and secondary contact recreation and as a source for drinking water supply after conventional treatment in accordance with the requirements of the Department. Suitable for fishing and the survival and propagation of a balanced indigenous aquatic community of fauna and flora. Suitable also for industrial and agricultural uses.”

South Carolina's water quality standard (WQS) for fecal coliform in freshwater is:

"Not to exceed a geometric mean of 200/100 mL, based on five consecutive samples during any 30 day period; nor shall more than 10% of the total samples during any 30 day period exceed 400/100 mL." (R.61-68).

Primary contact recreation is not limited to large streams and lakes. Even streams that are too small to swim in, will allow small children the opportunity to play and immerse their hands and faces. The current WQS protect all surface waters for primary recreational use.

2.0 WATER QUALITY ASSESSMENT

The South Carolina Department of Health and Environmental Control (SCDHEC) conduct monitoring at one location, station CW-243, within the Big Branch watershed (SCDHEC 2005).


Waters in which no more than 10% of the samples collected over a five year period are greater than 400 fecal coliform counts or cfu/100 ml are considered to comply with the South Carolina WQS for fecal coliform bacteria. Waters with more than 10% of samples greater than 400 cfu/100 ml are considered impaired for fecal coliform bacteria and placed on South Carolina's §303(d) list¹. In the Big Branch watershed, there is 1 location that is considered impaired due to fecal coliform WQS exceedances (SCDHEC 2006). Table 3 provides a summary of number of samples collected, number of exceedances and exceedances percentage. Figure 1 illustrates sample location exceeding the water quality standard for monitoring conducted between 2001 and 2005. Figure 3 illustrates precipitation and fecal coliform by date.

Table 3. Fecal Coliform WQS Exceedances Summary for Station CW-243 (2001-2005)

Station	Waterbody	Number of Samples	Number of Samples >400/100 ml	% Samples Exceeding WQS
CW-243	Big Branch	52	27	51%

¹ The frequency of sampling was fewer than five samples within a 30-day period, therefore the water quality assessment was based on the 10% standard (400/100 mL).

Figure 3. Fecal coliform and precipitation data by date for station CW-243 on Big Branch, Clarendon County, SC.

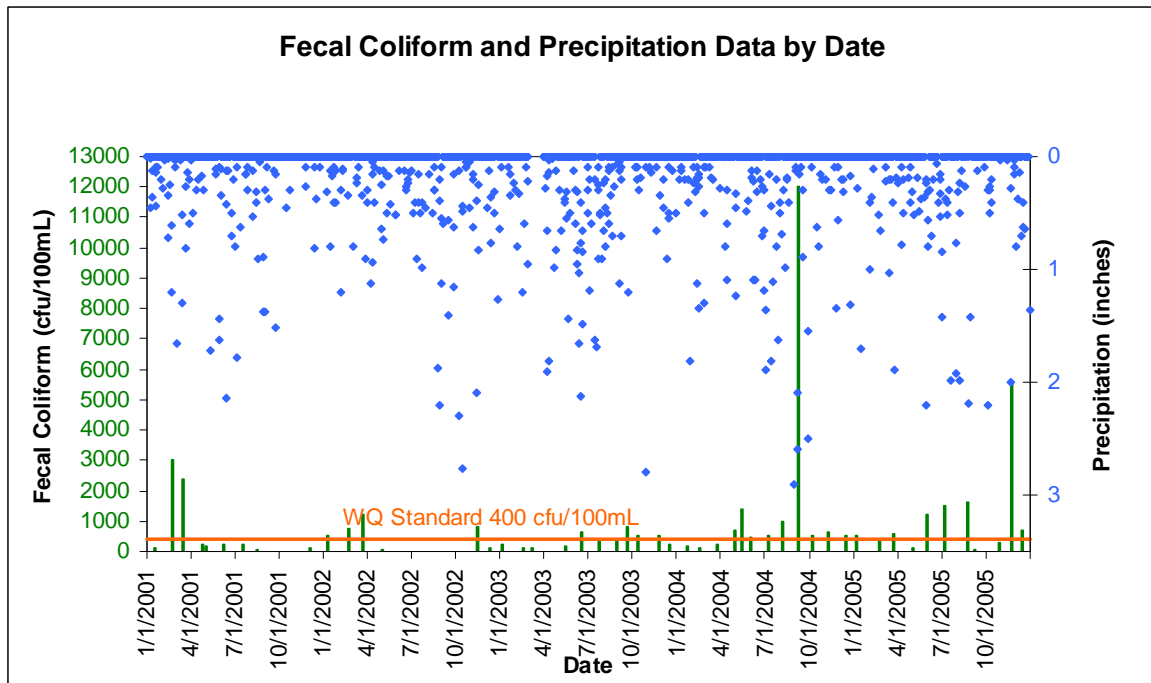

3.0 SOURCE ASSESSMENT AND LOAD ALLOCATION

Fecal coliform bacteria are used by the State of South Carolina as the indicator for pathogens in surface waters. Pathogens, which are usually difficult to detect, cause disease and make full body contact recreation in lakes and streams a risk to public health. Indicators such as fecal coliform bacteria, enterococci, or *E. coli* are easier to measure, have similar sources as pathogens, and persist in surface waters for a similar or longer length of time. These bacteria are not in themselves disease causing, but indicate the potential presence of organisms that may result in sickness.

There are many sources of pathogen pollution in surface waters. In general these sources may be classified as point and nonpoint sources. With the implementation of technology-based controls, pollution from continuous point sources, such as factories and wastewater treatment facilities, has been greatly reduced. These point sources are required by the (CWA) to obtain a NPDES permit. In South Carolina NPDES permits require that dischargers of sanitary wastewater must meet the state standard for fecal coliform at the point of discharge. Municipal and private sanitary wastewater treatment facilities may occasionally be sources of pathogen or fecal coliform bacteria pollution. However, if these facilities are discharging wastewater that meets their permit limits, they are not causing impairment provided that a daily maximum limit is being met as specified in the TMDL. If any of these facilities is not meeting its permit limits, enforcement actions/mechanisms are required.

Other non-continuous point sources required to obtain NPDES permits that may be a source of pathogens include Municipal Separate Storm Sewer Systems (MS4s) and stormwater discharges from construction or industrial sites. MS4s may require NPDES discharge permits under the NPDES Stormwater regulations. These sources are also required to comply with the state standard for the pollutant(s) of concern. If discharges from regulated MS4 entities and from construction and industrial sites meet the percentage reduction or the water quality standard as prescribed in Section 5 of this TMDL document and required in their permit(s), they should not be causing or contributing to an instream FC bacteria impairment.

3.1 Point Sources

Point sources are defined as pollutant loads discharged at a specific location from pipes, outfalls, and conveyance channels from either municipal wastewater treatment plants, industrial waste treatment facilities, or regulated stormwater discharges. Point sources can also include pollutant loads contributed by tributaries to the main receiving water stream or river. Point sources can be further broken down into continuous and non-continuous.

3.1.1 Continuous Point Sources

Currently, there are no active NPDES dischargers within the Big Branch watershed. Future NPDES discharges in the referenced watershed are required to comply with the load reductions prescribed in the WLA and demonstrate consistency with the assumptions and requirements of the TMDL.

3.1.2 Non-Continuous Point Sources

Non-continuous point sources include all NPDES-permitted stormwater discharges, including current and future MS4s, construction and industrial discharges covered under permits numbered SCS -and SCR and regulated under SC Water Pollution Control Permits Regulation 122.26(b)(14)&(15). All regulated MS4 entities have the potential to contribute FC pollutant loadings in the delineated drainage area used in the development of this TMDL.

Big Branch currently does not have a designated Municipal Separate Storm Sewer Systems (MS4) community covered under SCS. The NPDES Storm Water Construction General Permit from DHEC (SCR100000) covers construction activities. Where construction activities have the potential to affect water quality of a water body with a TMDL, the Storm Water Pollution Prevention Plan (SWPPP) for the site must address any pollutants of concern and adhere to any wasteload allocations in the TMDL. The Big Branch watershed does not have great potential for growth and development; however construction activities are likely to occur at any given time in the watershed.

If future MS4 permits are applicable to this watershed, then those discharges will also become subject to the assumptions and requirements of the WLA portion of this TMDL. However, there may be industrial or construction activities going on at any time that could produce stormwater runoff.

The current overall developed land use in this watershed is 3.29%. Based on current Geographic Information System (GIS) information (available at time of TMDL development) there are currently no SCDOT rest areas or other facilities located in the referenced watershed area.

Sanitary sewer overflows (SSOs) to surface waters have the potential to severely impact water quality. These untreated sanitary discharges result in violations of the WQS. It is the responsibility of the NPDES wastewater discharger, or collection system operator for non-permitted 'collection only' systems, to ensure that releases do not occur. There were 6 reported releases in Clarendon County between 2000 and 2008, resulting in the release of approximately 353,700 gallons of untreated sanitary waste. It is not known what percentage of these releases has affected the Big Branch watershed. It has been shown that fecal coliform concentrations in typical SSOs are reported as 10^5 to 10^7 MPN/100mL (Novotny et al. 1989). Unfortunately releases to surface waters from SSOs are not always preventable or reported.


Industrial facilities that have the potential to cause or contribute to a violation of a water quality standard are covered by the NPDES Storm Water Industrial General Permit (SCR000000). Construction activities may be covered by the NPDES Storm Water Construction General Permit from DHEC (SCR100000). Where permitted 1 construction activities have the potential to affect water quality of a water body with a TMDL, the Storm Water Pollution Prevention Plan (SWPPP) for the site must address any pollutants of concern and adhere to any wasteload allocations in the TMDL. Note that there may be other stormwater discharges not covered under permits numbered SCS and SCR that occur in the referenced watershed. These activities are not subject to the WLA portion of the TMDL.

3.2 Nonpoint Sources

Nonpoint source pollution is defined as pollution that is not released through pipes but rather originates from multiple sources over a relatively large area. Nonpoint sources can be divided into source activities related either to land or water use including failing septic tanks, improper animal-keeping practices, agriculture, forestry practices, wildlife and urban and rural runoff.

Nonpoint source pollution is likely the major contributing factor to negatively impact water quality in this watershed. The Department recognizes that there may be wildlife, agricultural activities, grazing animals, septic tanks, and/or other nonpoint source contributors located within unregulated areas (outside the permitted area) of the Big Branch watershed. Nonpoint sources located in unregulated areas are subject to the load allocation and not the wasteload allocation of the TMDL document.

Figure 4. SCDOT Owned and Operated Roads within the Big Branch Watershed.

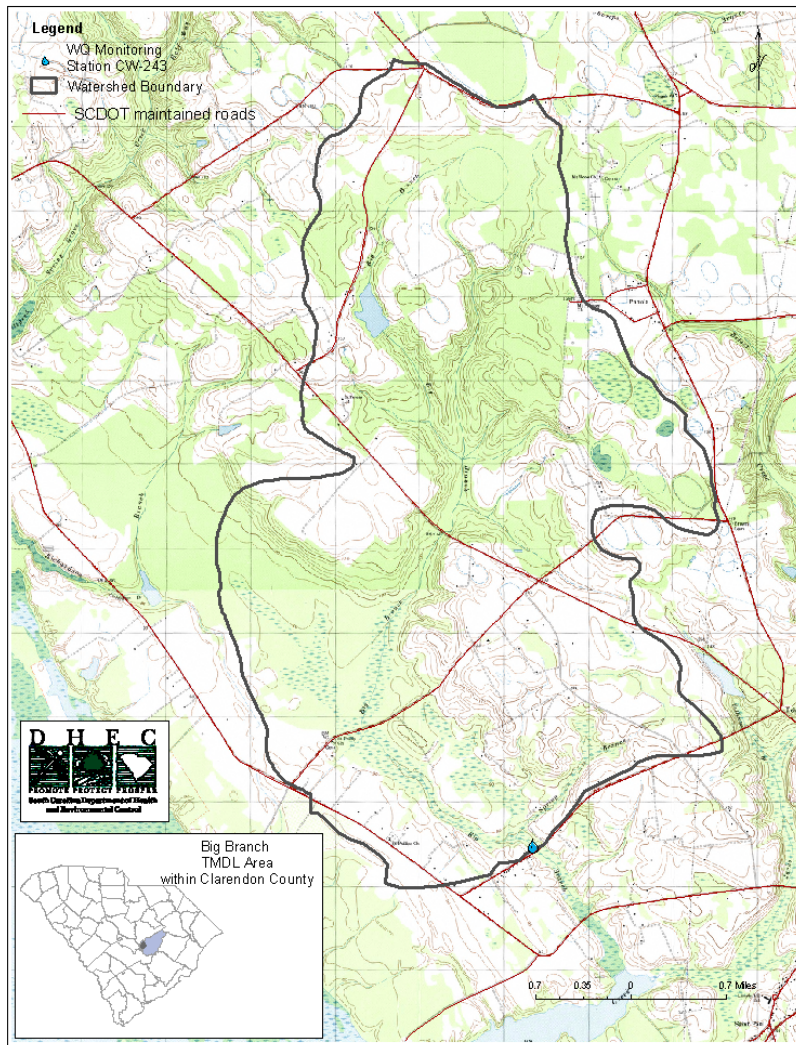

3.2.1 Wildlife

Wildlife (mammals and birds) can be a significant contributor of fecal coliform bacteria. Wildlife in this area typically includes deer, squirrels, raccoons, and other mammals as well as a variety of birds. Wildlife wastes are carried into nearby streams by runoff following rainfall or deposited directly in streams. Waterfowl also may be a significant contributor of fecal coliform bacteria in this watershed, especially in impounded areas such as the duck ponds located within the watershed, which provide a desirable habitat for geese and ducks.

According to a study conducted by South Carolina Department of Natural Resources (SC DNR) in 2008 there are an estimated 30 to 45 deer per square mile within Clarendon County (SC DNR 2008). The study estimated deer density based on suitable habitat (forests, croplands, and pastures). The fecal coliform production rate for deer has been shown to be 3.47×10^6 cfu/head-day in a study conducted by Yagow (1999), of which only a portion will enter the watershed. Wildlife may contribute a significant portion of the overall fecal coliform load within the Big Branch watershed.

During the windshield survey conducted on March 31, 2008, three beavers and various beaver dams were observed in the Big Branch watershed. Photographs of the beaver activity can be seen in Appendix B.

3.2.2 Agricultural Activities

Agricultural activities that involve livestock or animal wastes are potential sources of fecal coliform contamination of surface waters. Fecal matter can enter the waterway via runoff from the land or by direct deposition into the stream. Agricultural activities may represent a significant source in the Big Branch watershed, which constitutes a large portion of the land use. Unstabilized soil directly adjacent to surface waters can contribute to FC loading during periods of runoff after rain events. During these events, wildlife wastes can be transported into the creek and carried downstream. Installation of a riparian buffer in areas where creek banks have been disturbed may be appropriate in reducing FC bacteria loading to receiving waters.

3.2.2.1 Agricultural Animal Facilities

Owners/operators of most commercial animal growing operations are required by SC Regulation 61-43, Standards for the Permitting of Agricultural Animal Facilities, to obtain permits for the handling, storage, treatment (if necessary) and disposal of the manure, litter and dead animals generated at their facilities (SCDHEC 2002). The requirements of R. 61-43 are designed to protect water quality; therefore, we have a reasonable assurance that facilities operating in compliance with this regulation should not contribute to downstream water quality impairments. South Carolina currently does not have any confined animal feeding operations (CAFOs) under NPDES coverage; however, the State does have permitted animal feeding operations (AFOs) covered under R. 61-43. These permitted operations are not allowed to discharge to waters of the State and are covered under 'no discharge' (ND) permits. Discharges from these operations to waters of the State are illegal and are subject to enforcement actions by SCDHEC. There are no permitted AFOs within the Big Branch watershed.

3.2.2.2 Grazing Animals

Livestock, especially cattle, are frequently major contributors of fecal coliform bacteria to streams. Cattle on average produce some $1 \text{ E}+11$ cfu/day per animal of fecal coliform bacteria (ASAE 1998). Grazing cattle and other livestock may contaminate streams with fecal coliform bacteria indirectly by runoff from pastures or directly by defecating into streams and ponds. The grazing of unconfined livestock (in pastures) is not regulated by SCDHEC. The United States Department of Agriculture's National Agricultural Statistics Service reported 4833 cattle and calves in Clarendon County for 2007 (USDA 2007). Direct loading by cattle or other livestock to surface waters within the Big Branch is likely to be a significant source of fecal coliform. Pasture/hay and crop land use within the Big Branch watershed is estimated to be 3,264 acres, which was derived from NCLD 2001. Pasture/hay and crop land use within Clarendon County is estimated to be 118,989 acres. By taking the ratio of above land use, the Big Branch watershed is approximately 2.7% of the Clarendon County pasture/hay and crop land use, assuming an even distribution across Clarendon County.

This relates to an estimated 130 cattle and calves within the Big Branch watershed, which combined produces an average of $1.3E+13$ cfu/day of FC bacteria.

BMP installation could minimize the impact of grazing animals to surface waters of the State. A study conducted in 1998 by the American Society of Agricultural and Biological Engineers (ASABE 1998) has shown that a vegetative buffer can reduce fecal runoff concentrations from $2.0E+7$ cfu/100mL to an immeasurable amount once filtered through the buffer. The buffer in this study was also shown to reduce phosphorous and nitrogen concentrations by 75%. Installing fencing along the streams within the watershed where livestock are present would also eliminate the direct contact of cattle with the streams. It has also been shown that installing water troughs within a pasture area in a West Virginia study reduced the amount of time cattle spent drinking directly from streams by 92% (ASABE 1997). An indirect result of this was a 77% reduction in stream bank erosion.

3.2.3 Leaking Sanitary Sewers and Illicit Discharges

Leaking sewer pipes and illicit sewer connections represent a direct threat to public health since they result in discharge of partially treated or untreated human wastes to the surrounding environment. Quantifying these sources is extremely speculative without direct monitoring of the source because the magnitude is directly proportional to the volume and its proximity to the surface water. Typical values of fecal coliform in untreated domestic wastewater range from 10^4 to 10^6 MPN/100mL (Metcalf and Eddy 1991).

Illicit sewer connections into storm drains result in direct discharges of sewage via the storm drainage system outfalls. The existence of illicit sewer connections to storm drains is well documented in many urban drainage systems. However, this watershed is not served by a sewer collection system and considered 100% septic.

3.2.4 Failing Septic Systems

Studies demonstrate that wastewater located four feet below properly functioning septic systems contain on average less than one fecal coliform bacteria organism per 100 mL (Ayres Associates 1993). Failed or non-conforming septic systems, however, can be a major contributor of fecal coliform to the Big Branch and tributaries. Wastes from failing septic systems enter surface waters either as direct overland flow or via groundwater. Although loading to streams from failing septic systems is likely to be a continual source, wet weather events can increase the rate of transport of pollutants from failing septic systems because of the wash-off effect from runoff and the increased rate of groundwater recharge.

Based on the 2000 U.S. population census (U.S. Census Bureau 2000), there are approximately 100 households with an approximate population of 214 within the Big Branch watershed. The Big Branch watershed is not serviced by a community wastewater collection and treatment plant and therefore all of the homes in the watershed are likely serviced by on-site private septic systems. The functioning status of these systems at the time of TMDL development was unknown.

3.2.5 Urban Runoff

Dogs, cats, and other domesticated pets are the primary source of FC deposited on the urban landscape. According to a 2002 study conducted by the American Veterinary Medical Association (AVMA 2002), there are 0.58 dogs and 0.66 cats on average per each household within an urban setting. Based on U.S. census data (U.S. Census Bureau 2000), it is estimated that there are 15,303 households within Clarendon County, of which approximately 100 are within the Big Branch watershed. This results in approximately 58 dogs and 66 cats in the delineated area. It has been shown that dogs produce approximately 0.32 pounds of fecal waste per day (Geldrich, et al., 1962). This results in an estimated 32 pounds of waste deposited by domesticated dogs in the watershed per day. Based on the AVMA study and observations by Geldrich and others, cats produce approximately 0.136 pounds of fecal waste per day. There are approximately 66 cats in the drainage area producing 8.97 pounds of waste per day. There are also 'urban' wildlife, squirrels, raccoons, pigeons, and other birds in the watershed, all of which contribute to the FC load. Urban runoff is considered to be negligible within the Big Branch watershed due to its rural nature.

4.0 LOAD-DURATION CURVE METHOD

The load-duration curve method was developed as a means of incorporating natural variability, uncertainty, and risk assessment into TMDL development (Bonta and Cleland 2003). The analysis is based on the range of hydrologic conditions for which there are appropriate water quality data. The load-duration curve method uses the cumulative frequency distribution of stream flow and pollutant concentration data to estimate existing and TMDL loads for a water body. Development of the load-duration curve is described in this chapter.

The load-duration curve method depends on an adequate period of record for flow data. There are no United States Geological Survey (USGS) gauges collecting “real-time” flow data along the Big Branch. Therefore data from USGS gauge 02174250 on Cow Castle Creek near Bowman was used for the flow duration curves. Flow data for a twelve-year period (1996-2007) were used to establish flow duration curves. The records for this period were complete (i.e., no missing dates) for Cow Castle Creek gauge.

The flow records were used to estimate flow at the impaired monitoring station. Drainage area of the sampling station was delineated using USGS topographic maps using ArcMap software. The cumulative area drained was calculated and used to estimate flow based on the ratio of the monitoring station drainage area to the downstream USGS gauge. For example, the USGS Cow Castle Creek gauge records flow from 23.4 square miles (sq mi). The cumulative drainage area at monitoring station CW-243 is approximately 14.15 sq mi, or 60.5% of the area drained at the Cow Castle Creek gauge. Mean daily flow for the CW-243 monitoring location was assumed to be 60.5% of the daily flow at the Cow Castle gauge.

Flow duration curves were developed by ranking flows from highest to lowest and calculating the probability of occurrence (presented as a percentage or duration interval), where zero corresponds to the highest flow. The duration interval can be used to determine the percentage of time a given flow is achieved or exceeded, based on the period of record. Flow duration curves were divided into five hydrologic condition categories (High Flows, Moist Conditions, Mid-Range, Dry Conditions and Low Flows). Categorizing flow conditions can assist in determining which hydrologic conditions result in the greatest number of exceedances. A high number of exceedances under dry conditions might indicate a point source or illicit connection issue, whereas moist conditions may indicate nonpoint sources. Data within the High Flow and Low Flow categories are generally not used in the development of a TMDL due to their infrequency.

A target load-duration curve was created by calculating the allowable load using daily flow, the fecal coliform WQS concentration and a unit conversion factor. The water quality target was set at 380 cfu/100ml for the instantaneous criterion, which is five percent lower than the water quality criteria of 400 cfu/100ml. A five percent explicit Margin of Safety (MOS) was reserved from the water quality criteria in developing target load-duration curves. The load-duration curve for station CW-243 is presented in Figure 5.

For the load duration curve, the independent variable (X-Axis) represents the percentage of estimated flows greater than value x. The dependent variable (Y-Axis) represent the fecal coliform loading at each estimated flow expressed in terms of colony forming units per day (cfu/day). In each defined flow interval, existing and target loadings were calculated by the following equations:

$$\text{Existing Load} = \text{Mid-Point Flow in Each Hydrologic Category} \times 90^{\text{th}} \text{ Percentile Fecal Coliform Concentration} \times 10000$$

$$\text{Target Load} = \text{Mid-Point Flow in Each Hydrologic Category} \times 380 \text{ (WQ criterion minus a 5\% MOS)} \times 10000$$


$$\text{Percent Reduction} = (\text{Existing Load} - \text{Target Load}) / \text{Existing Load}$$

Instantaneous load for the impaired station was calculated. Measured fecal coliform concentrations from 2001 through 2005 were multiplied by measured (or estimated flow based on drainage area) flow on the day of sampling and a unit conversion factor. These data were plotted on the load-duration graph based on the flow

duration interval for the day of sampling. Samples above the target line are violations of the WQS while samples below the line are in compliance (Figure 5). Only the instantaneous water quality criterion was targeted because there is insufficient data to evaluate against the 30-day geometric mean.

An existing load was determined for each hydrologic category for the TMDL calculations. The 90th percentile of measured fecal coliform concentration within each hydrologic category was multiplied by the flow at each category midpoint (i.e., flow at the 25% duration interval for the Moist Conditions, 50% interval for Mid-Range, and 75% for Dry Condition). Existing loads are plotted on the load-duration curves presented in Figure 5. These values were compared to the target load (which includes an explicit 5% MOS) at each hydrologic category midpoint to determine the percent load reduction necessary to achieve compliance with the WQS. This TMDL assumes that if the highest percent reduction is achieved than the WQS will be attained under all flow conditions.

Figure 5. Load Duration Curve for Big Branch Station CW-243.

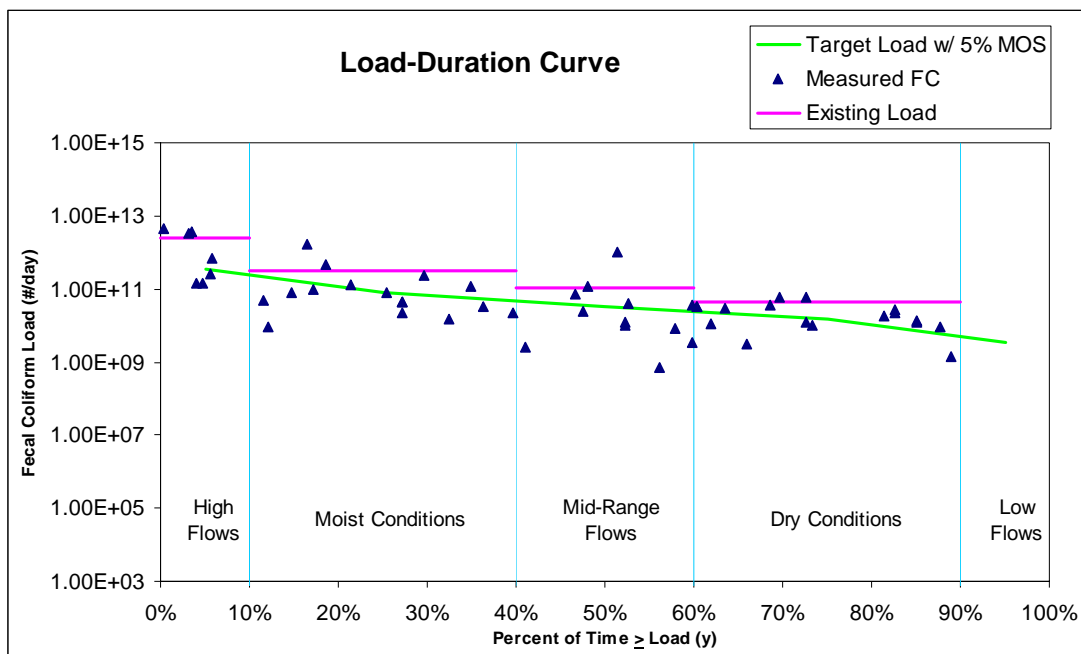

5.0 DEVELOPMENT OF TOTAL MAXIMUM DAILY LOAD

A total maximum daily load (TMDL) for a given pollutant and water body is comprised of the sum of individual wasteload allocations (WLAs) for point sources, and load allocations (LAs) for both nonpoint sources and natural background levels. In addition, the TMDL must include a margin of safety (MOS), either implicitly or explicitly, to account for the uncertainty in the relationship between pollutant loads and the quality of the receiving water body. Conceptually, this definition is represented by the equation:

$$TMDL = \sum WLAs + \sum LAs + MOS$$

The TMDL is the total amount of pollutant that can be assimilated by the receiving water body while still achieving compliance with WQS. In TMDL development, allowable loadings from all pollutant sources that cumulatively amount to no more than the TMDL must be established and thereby provide the basis to establish water quality-based controls.

For most pollutants, TMDLs are expressed as a mass load (e.g., kilograms per day). For bacteria, however, TMDLs are expressed in terms of number (#), colony forming units (cfu), organism counts (or resulting concentration), or MPN (Most Probable Number), in accordance with 40 CFR 130.2(l).

5.1 Critical Conditions

This TMDL is based on the flow recurrence interval between 10% and 90% and excludes extreme high and low flow conditions; flows that are characterized as ‘Low’ or ‘High’ in Figure 4 and Appendix A were not included in the analysis. The critical condition for each monitoring station is identified as the flow condition requiring the largest percent reduction, within the 10-90% duration intervals. Critical conditions for the Big Branch watershed pathogen impaired segments are listed in Table 4. These data indicate that for the station CW-243, moist weather results in larger bacteria loads and is therefore the critical condition for this station.

5.2 Existing Load

An existing load was determined for each hydrologic category for the TMDL calculations as described in Section 4.0 of this TMDL. The existing load under the critical condition, described in Section 5.1 above was used in the TMDL calculations. Loadings from all sources are included in this value: Wildlife, cattle-in-streams, failing septic systems as well as all non-point sources. The existing load for station CW-243 in the Big Branch watershed is provided in Appendix A.

Table 4. Percent Reduction Necessary to Achieve Target Load by Hydrologic Category.

Station	Waterbody	Moist Conditions	Mid-Range Flow	Dry Conditions
CW-243	Big Branch	75%	67%	65%

Highlighted cells indicate critical condition.

NRN = No reduction needed. Existing load below target load.

5.3 Wasteload Allocation

The wasteload allocation (WLA) is the portion of the TMDL allocated to NPDES-permitted point sources (USEPA 1991). The WLA summation is determined by subtracting the margin of safety and the sum of the load allocation from the total maximum daily load. Note that all illicit dischargers, including SSOs, are illegal and not covered under the WLA of this TMDL.

5.3.1 Continuous Point Sources

There are currently no permitted domestic dischargers in the Big Branch watershed. Future continuous discharges are required to meet the prescribed loading for the pollutant of concern based on permitted flow and an allowable permitted maximum concentration of 400cfu/100mL.

5.3.2 Non-Continuous Sources

Non-continuous point sources include all NPDES-permitted stormwater discharges, including current and future MS4s, construction and industrial discharges covered under permits numbered SCS & SCR and regulated under SC Water Pollution Control Permits Regulation 122.26(b)(14) & (15). Illicit discharges, including SSOs, are not covered under any NPDES permit and are subject to enforcement mechanisms. All areas defined as “Urbanized Area” by the US Census are required under the NPDES Stormwater Regulations to obtain a permit for the discharge of stormwater. Other non-urbanized areas may be required under the NPDES Phase II Stormwater Regulations to obtain a permit for the discharge of stormwater.

Waste load allocations for stormwater discharges are expressed as a percentage reduction instead of a numeric loading due to the uncertain nature of stormwater discharge volumes and recurrence intervals. Regulated stormwater discharges are required to meet the percentage reduction or the existing instream standard for the pollutant of concern. The percent reduction is based on the maximum percent reduction (critical condition) within any hydrologic category necessary to achieve target conditions. Table 5 presents the reduction needed in the impaired segment. The reduction percentage in this TMDL also applies to the fecal

coliform waste load attributable to those areas of the watershed, which are covered or will be covered under NPDES MS4 permits.

Based on the available information at this time, the portion of the watershed that drains directly to a regulated MS4 and that which drains through the unregulated MS4 has not been clearly defined within the MS4 jurisdictional area. Loading from both types of sources (regulated and unregulated) typically occurs in response to rainfall events, and discharge volumes as well as recurrence intervals are largely unknown.

As appropriate information is made available to further define the pollutant contributions for the permitted MS4, an effort can be made to revise these TMDLs. This effort will be initiated as resources permit and if deemed appropriate by the Department. For the Department to revise these TMDLs the following information should be provided, but not limited to:

1. An inventory of service boundaries of the MS4 covered in the MS4 permit, provided as ARCGIS compatible shape files.
2. An inventory of all existing and planned stormwater discharge points, conveyances, and drainage areas for the discharge points, provided as ARCGIS compatible shape files. If drainage areas are not known, any information that would help estimate the drainage areas should be provided. The percentage of impervious surface within the MS4 area should also be provided.
3. Appropriate and relevant data should be provided to calculate individual pollutant contributions for the MS4 permitted entities. At a minimum, this information should include precipitation, water quality, and flow data for stormwater discharge points.

Compliance with terms and conditions of existing and future NPDES sanitary and stormwater permits (including all construction, industrial and MS4) may effectively implement the WLA and demonstrate consistency with the assumptions and requirements of the TMDL. However, the Department recognizes that SCDOT is not a traditional MS4 in that it does not possess statutory taxing or enforcement powers. SCDOT does not regulate landuse or zoning, issue building or development permits.

Table 5. Percent Reduction Necessary to Achieve Target Load.

Station	Waterbody	% Reduction
CW-243	Big Branch	75%

5.4 Load Allocation

The Load Allocation applies to the nonpoint sources of fecal coliform bacteria and is expressed both as a load and as a percent reduction. The load allocation is calculated as the difference between the target load under the critical condition and the point source WLA. The load allocation for each station is listed in Table Ab-1 Table and 7. There may also be other unregulated MS4s located in the watershed that are subject to the LA component of this TMDL. At such time that the referenced entities, or other future unregulated entities become regulated NPDES MS4 entities and subject to applicable provisions of SC Regulation 61-68 D, they will be required to meet load reductions prescribed in the WLA component of the TMDL. This also applies to future discharges associated with industrial and construction activities that will be subject to SC R. 122.26(b)(14) & (15) (SCDHEC 2003).

5.5 Seasonal Variability

Federal regulations require that TMDLs take into account the seasonal variability in watershed loading. The variability in this TMDL is accounted for by using a 10-year hydrological and 5 year water quality sampling data set, which includes data collected from all seasons.

5.6 Margin of Safety

The margin of safety (MOS) may be explicit and/or implicit. The explicit margin of safety is 5% of the TMDL or 20 counts/100mL of the instantaneous criterion of 400 cfu/100 mL (380 cfu/100mL). Target loads are therefore 95% of the assimilative capacity (TMDL) of the waterbody. The MOS is expressed as the value calculated from the critical condition defined in Section 5.1 and is the difference between the TMDL and the sum of the WLA and LA. The calculated values of the MOS for each station are given in Table 6.

5.7 TMDL

For most pollutants, TMDLs are expressed as a mass load (e.g., kilograms per day). For bacteria, however, TMDLs are expressed in terms of cfu or organism counts (or resulting concentration), in accordance with 40 CFR 130.2(l). Only the instantaneous water quality criterion was targeted because there is insufficient data to evaluate against the 30-day geometric mean. The target load is defined as the load (from point and nonpoint sources) minus the MOS that a stream segment can receive while meeting the WQS. The TMDL value is the median target load within the critical condition (i.e., the middle value within the hydrologic category that requires the greatest load reduction) plus WLA and MOS. Values for each component of the TMDL for the impaired segments of the Big Branch watershed are provided in Table 6.

While TMDL development was primarily based on instantaneous water quality criterion, terms and conditions of NPDES permits for continuous discharges require facilities to demonstrate compliance with both geometric mean and instantaneous water quality criteria for fecal coliform bacteria in treated effluent. NPDES permits for continuous dischargers require data collection sufficient to monitor for compliance of both criteria at the point of outfall.

Table 6 indicates that the percent reduction or WQ standard required to be met for each subwatershed (WQM station). Note that all future regulated NPDES permitted stormwater discharges will also be required to meet the prescribed percentage reductions, or the water quality standard. It should be noted that in order to meet the WQS for FC bacteria, prescribed load reductions must be targeted from all sources, including NPDES permitted and nonpoint sources.

Based on the information available at this time, the portion of the watershed that drains directly to a regulated MS4 and that which drains through the non-regulated MS4 has not been clearly defined. Loading from both types of sources (regulated and non-regulated) typically occur in response to rainfall events, and discharge volumes as well as recurrence intervals are largely unknown. Therefore, the regulated MS4 is assigned the same percent reduction as the non-regulated sources in the watershed. Compliance with the MS4 permit in regards to this TMDL document is determined at the point of discharge to waters of the state. The regulated MS4 entity is only responsible for implementing the TMDL WLA in accordance with their MS4 permit requirements and is not responsible for reducing loads prescribed as LA in this TMDL document.

Table 6. TMDL Components for the Fecal Coliform Impaired Segments in the Big Branch Watershed. Loads are expressed as colony forming units (cfu) per day.

Station	Existing Load (cfu/day)	TMDL (cfu/day)	Margin of Safety (cfu/day)	Wasteload Allocation (WLA)			Load Allocation (LA)	
				Continuous Sources ¹ (cfu/day)	Non-Continuous Sources ^{2,4} (% Reduction)	Non-Continuous SCDOT ^{3,4} (% Reduction)	Load Allocation (cfu/day)	%Reduction to Meet LA ⁴
CW-243	3.21E+11	8.28E+10	4.14E+09	N/A	75%	0%	7.87E+10	75%

Table Notes:

1. WLAs are expressed as daily maximum; NA = not applicable, no point sources. Existing and future continuous discharges are required to meet the prescribed loading or the existing instream standard for the pollutant of concern. Loadings were developed based upon permitted flow and an allowable permitted maximum concentration of 400cfu/100ml.
2. Percent reduction applies to all NPDES-permitted stormwater discharges, including current and future MS4, construction and industrial discharges covered under permits numbered SCS & SCR. Stormwater discharges are expressed as a percentage reduction due to the uncertain nature of stormwater discharge volumes and recurrence intervals. Stormwater discharges are required to meet percentage reduction or the existing instream standard for pollutant of concern.
3. As long as the conditions within the SCDOT MS4 area remain the same the Department deems the contributions from SCDOT negligible and no reduction of FC bacteria is necessary. SCDOT must continue to comply with the provisions of its approved NPDES stormwater permit.
4. Percent reduction applies to existing instream load.

6.0 IMPLEMENTATION

The implementation of both point (WLA) and non-point (LA) source components of the TMDL are necessary to bring about the required reductions in FC bacteria loading to Big Branch and its tributaries in order to achieve water quality standards. Using existing authorities and mechanisms, an implementation plan providing information on how point and non point sources of pollution are being abated or may be abated in order to meet water quality standards is provided. As the implementation strategy progresses, DHEC may continue to monitor the effectiveness of implementation measures and evaluate water quality where deemed appropriate.

Point sources are discernible, confined, and discrete conveyances of pollutants to a water body including but not limited to pipes, outfalls, channels, tunnels, conduits, man-made ditches, etc. The Clean Water Act's primary point source control program is the National Pollutant Discharge Elimination System (NPDES). Point sources can be broken down into continuous and non-continuous point sources. Some examples of a continuous point source are wastewater treatment facilities (WWTF) and industrial facilities. Non-continuous point sources are related to stormwater and include municipal separate storm sewer systems (MS4), construction activities, etc. Current and future NPDES discharges in the referenced watershed are required to comply with the load reductions prescribed in the wasteload allocation (WLA).

Nonpoint source pollution originates from multiple sources over a relatively large area. It is diffuse in nature and indistinct from other sources of pollution. It is generally caused by the pickup and transport of pollutants from rainfall moving over and through the ground. Nonpoint sources of pollution may include, but are not limited to: wildlife, agricultural activities, illicit discharges, failing septic systems, and urban runoff. Nonpoint sources located in unregulated portions of the watershed are subject to the load allocation (LA) and not the WLA of the TMDL document.

South Carolina has several tools available for implementing the non-point source component of this TMDL. The *Implementation Plan for Achieving Total Maximum Daily Load Reductions from Nonpoint Sources for the State of South Carolina* (SCDHEC 1998) document is one example. Another key component for interested parties to control pollution and prevent water quality degradation in the watershed would be the establishment and administration of a program of Best Management Practices (BMPs). Best management practices may be defined as a practice or a combination of practices that have been determined to be the most effective, practical means used in the prevention and/or reduction of pollution.

Interested parties (local stakeholder groups, universities, local governments, etc.) may be eligible to apply for CWA §319 grants to install BMPs that will implement the LA portion of this TMDL and reduce nonpoint source FC loading to Big Branch and its tributaries. Congress amended the Clean Water Act (CWA) in 1987 to establish the Section 319 Nonpoint Source Management Program. Under Section 319, States receive grant money to support a wide variety of activities including the restoration of impaired waters. TMDL implementation projects are given highest priority for 319 funding. CWA §319 grants are not available for implementation of the WLA component of this TMDL or within any permitted jurisdictional MS4 area. Additional resources are provided in Section 7.0 of this TMDL document.

SCDHEC will also work with the existing agencies in the area to provide nonpoint source education in the Big Branch watershed. Local sources of nonpoint source education and assistance include the Natural Resource Conservation Service (NRCS), the Oconee County Soil and Water Conservation Services, the Clemson University Cooperative Extension Service, and the South Carolina Department of Natural Resources.

The Department recognizes that **adaptive management/implementation** of this TMDL might be needed to achieve the water quality standard and we are committed towards targeting the load reductions to improve water quality in the Big Branch Watershed. As additional data and/or information becomes available, it may become necessary to revise and/or modify the TMDL target accordingly.

6.1 Implementation Strategies

The strategies presented in this document for implementation of the referenced TMDL are not inclusive and are to be used only as guidance. The strategies are informational suggestions which may lead to the required load reductions being met for the referenced watershed while demonstrating consistency with the assumptions and requirements of the TMDL. Application of certain strategies provided within may be voluntary and are not a substitute for actual NPDES permit conditions.

6.1.1 Continuous Point Sources

Continuous point source WLA reductions will be implemented through NPDES permits. Existing and future continuous discharges are required to meet the prescribed loading for the pollutant of concern and demonstrate consistency with the assumptions and requirements of the TMDL. Loadings are developed based upon permitted flow and assume an allowable permitted maximum concentration of 400 cfu/100ml.

6.1.2 Non-Continuous Point Sources

An iterative BMP approach as defined in the general stormwater NPDES MS4 permit is expected to provide significant implementation of the WLA. Permit requirements for implementing WLAs in approved TMDLs will vary across waterbodies, discharges, and pollutant(s) of concern. The allocations within a TMDL can take many different forms – narrative, numeric, specific BMPs – and may be complimented by other special requirements such as monitoring.

The level of monitoring necessary, deployment of structural and non-structural BMPs, evaluation of BMP performance, and optimization or revisions to the existing pollutant reduction goals of the SWMP or any other plan is TMDL and watershed specific. Hence, it is expected that NPDES permit holders evaluate their existing SWMP or other plans in a manner that would effectively address implementation of this TMDL with an acceptable schedule and activities for their permit compliance. The Department staff (permit writers, TMDL project managers, and compliance staff) is willing to assist in developing or updating the referenced plan as deemed necessary. Please see Appendix D which provides additional information as it relates to evaluating the effectiveness of an MS4 Permit as it related to compliance with approved TMDLs. Compliance with terms and conditions of existing and future NPDES sanitary and stormwater permits (including all construction, industrial and MS4) may effectively implement the WLA and demonstrate consistency with the assumptions and requirements of the TMDL. For SCDOT, compliance with terms and conditions of its NPDES MS4 Permit is effective implementation of the WLA to the MEP.

The Department acknowledges that progress with the assumptions and requirements of the TMDL by MS4s is expected to take one or more permit iteration. Achieving the WLA reduction for the TMDL may constitute MS4 compliance with its SWMP, provided the MEP definition is met, even where the numeric percent reduction may not be achieved in the interim.

Regulated MS4 entities are required to develop a SWMP that includes the following: public education, public involvement, illicit discharge detection & elimination, construction site runoff control, post construction runoff control, and pollution prevention/good housekeeping. These measures are not exhaustive and may include additional criterion depending on the type of NPDES MS4 permit that applies. The following examples are

recognized as acceptable stormwater practices and may be applied to unregulated MS4 entities or other interested parties in the development of a stormwater management plan.

An informed and knowledgeable community is crucial to the success of a stormwater management plan (USEPA, 2005). MS4 entities may implement a public education program to distribute educational materials to the community, or conduct equivalent outreach activities about the impacts of stormwater discharges on local waterbodies and the steps that can be taken to reduce stormwater pollution. Some appropriate BMPs may be brochures, educational programs, storm drain stenciling, stormwater hotlines, tributary signage, and alternative information sources such as web sites, bumper stickers, etc (USEPA, 2005).

The public can provide valuable input and assistance to a stormwater management program and they may have the potential to play an active role in both the development and implementation of the stormwater program where deemed appropriate by the entity. There are a variety of practices that can involve public participation such as public meetings/citizens panels, volunteer water quality monitoring, volunteer educators, community clean-ups, citizen watch groups, and "Adopt a Storm Drain" programs which encourage individuals or groups to keep storm drains free of debris and monitor what is entering local waterways through storm drains (USEPA, 2005).

Illicit discharge detection and elimination efforts are also necessary. Discharges from MS4s often include wastes and wastewater from non-stormwater sources. These discharges enter the system through either direct connections or indirect connections. The result is untreated discharges that contribute high levels of pollutants, including heavy metals, toxics, oil and grease, solvents, nutrients, viruses, and bacteria to receiving waterbodies (USEPA, 2005). Pollutant levels from these illicit discharges have been shown in EPA studies to be high enough to significantly degrade receiving water quality and threaten aquatic, wildlife, and human health. MS4 entities may have a storm sewer system map which shows the location of all outfalls and to which waters of the US they discharge for instance. If not already in place, an ordinance prohibiting non-stormwater discharges into a MS4 with appropriate enforcement procedures may also be developed. Entities may also have a plan for detecting and addressing non-stormwater discharges. The plan may include locating problem areas through infrared photography, finding the sources through dye testing, removal/correction of illicit connections, and documenting the actions taken to illustrate that progress is being made to eliminate illicit connections and discharges.

A program might also be developed to reduce pollutants in stormwater runoff to the MS4 area from construction activities. An ordinance or other regulatory mechanism may exist requiring the implementation of proper erosion and sediment controls on applicable construction sites. Site plans should be reviewed for projects that consider potential water quality impacts. It is recommended that site inspections should be conducted and control measures enforced where applicable. A procedure might also exist for considering information submitted by the public (USEPA, 2005). For information on specific BMPs please refer to the SCDHEC Stormwater Management BMP Handbook online at: http://www.scdhec.com/environment/ocrm/pubs/docs/SW/BMP_Handbook/Erosion_prevention.pdf

Post-construction stormwater management in areas undergoing new development or redevelopment is recommended because runoff from these areas has been shown to significantly affect receiving waterbodies. Many studies indicate that prior planning and design for the minimization of pollutants in post-construction stormwater discharges is the most cost-effective approach to stormwater quality management (USEPA, 2005). Strategies might be developed to include a combination of structural and/or non-structural BMPs. An ordinance or other regulatory mechanism may also exist requiring the implementation of post-construction runoff controls and ensuring their long term-operation and maintenance. Examples of non-structural BMPs are planning procedures and site-based BMPs (minimization of imperviousness and maximization of open space). Structural BMPs may include but are not limited to stormwater retention/detention BMPs, infiltration BMPs (dry wells, porous pavement, etc.), and vegetative BMPs (grassy swales, filter strips, rain gardens, artificial wetlands, etc.).

Pollution prevention/good housekeeping is also a key element of stormwater management programs. Generally this requires the MS4 entity to examine and alter their programs or activities to ensure reductions in

pollution are occurring. It is recommended that a plan be developed to prevent or reduce pollutant runoff from municipal operations into the storm sewer system and it is encouraged to include employee training on how to incorporate and document pollution prevention/good housekeeping techniques. To minimize duplication of effort and conserve resources, the MS4 operator can use training materials that are available from EPA or relevant organizations (USEPA, 2005).

MS4 communities are encouraged to utilize partnerships when developing and implementing a stormwater management program. Watershed associations, educational organizations, and state, county, and city governments are all examples of possible partners with resources that can be shared. For additional information on partnerships contact the SCDHEC Watershed Manager for the waterbody of concern online at: <http://www.scdhec.gov/environment/water/shed/contact.htm> For additional information on stormwater discharges associated with MS4 entities please see SCDHEC's NPDES web page online at <http://www.scdhec.gov/environment/water/swnpdes.htm> as well as the USEPA NPDES website online at http://cfpub.epa.gov/npdes/home.cfm?program_id=6 for information pertaining to the National Menu of BMPs, Urban BMP Performance Tool, Outreach Documents, etc.

6.1.3 Wildlife

Suggested forms of implementation for wildlife will vary widely due to geographic location and species. During the source assessment, beaver activity and beaver dams were seen within the Big Branch watershed. Beaver problems should be brought to the attention of SC Department of Natural Resources. There are many forms of acceptable wildlife BMPs in practice and development at the present time. For example, contiguous forested areas could be set up and managed to keep wildlife from bedding down and defecating near surface waters. This management practice relies on concentrating wildlife away from water bodies to minimize their impact to pollutant loading.

Deterrents may also be used to keep wildlife away from lawns and areas in close proximity to surface waters. Non-toxic spray deterrents, decoys, eagles, kites, noisemakers, scarecrows, and plastic owls are a sample of what is currently available. In addition, homeowners and the hunting community should be educated on the impacts of feeding wildlife or planting wildlife food plots in close proximity to surface waters. Please check local and federal laws before applying deterrents or harassing wildlife. Additional information may be obtained from the "Managing Pet and Wildlife Waste to Prevent Contamination of Drinking Water" bulletin provided by USEPA (2001).

6.1.4 Agricultural Activities

Suggested forms of implementation for agricultural activities will vary based on the activity of concern. Agricultural BMPs can be vegetative, structural or management oriented. When selecting BMPs, it is important to keep in mind that nonpoint source pollution occurs when a pollutant becomes available is detached and then transported to nearby receiving waters. Therefore, for BMPs to be effective, the transport mechanism of the pollutant, fecal coliform, needs to be identified. For livestock in the referenced watershed, installing fencing along the streams within the watershed and providing an alternative water source where livestock are present would eliminate direct contact with the streams. If fencing is not feasible, it has been shown that installing water troughs within a pasture area reduced the amount of time livestock spent drinking directly from streams by 92% (ASABE 1997). An indirect result of this was a 77% reduction in stream bank erosion by providing an alternative to accessing the stream directly for water supply.

For row crop farms in the referenced watershed, many common practices exist to reduce FC contributions. Unstabilized soil directly adjacent to surface waters can contribute to FC loading during periods of runoff after rain events. Agricultural field borders and filter strips (vegetative buffers) can provide erosion control around the border of planted crop fields. These borders can provide food for wildlife, may possibly be harvested (grass and legume), and also provide an area where farmers can turn around their equipment (SCDNR, 1997). A study conducted in 1998 by the American Society of Agricultural and Biological Engineers (ASABE 1998) has shown that a vegetative buffer measuring 6.1 meters in width can reduce fecal runoff concentrations from

2.0E+7 to an immeasurable amount once filtered through the buffer. A buffer of this width was also shown to reduce phosphorous and nitrogen concentrations by 75%.

The agricultural BMPs listed above are a sample of the many accepted practices that are currently available. Many other techniques such as conservation tillage, responsible pest management, and precision agriculture also exist and may contribute to an improvement in overall water quality in the watershed. Education should be provided to local farmers on these methods as well as acceptable manure spreading and holding (stacking sheds) practices.

For additional information on accepted agricultural BMPs you can obtain a copy of the "Farming for Clean Water in South Carolina" handbook by contacting Clemson University Cooperative Extension Service at (864) 656-1550. In addition, Clemson Extension Service offers a 'Farm-A-Syst' package to farmers. Farm-A-Syst allows the farmer to evaluate practices on their property and determine the nonpoint source impact they may be having. It recommends best management practices (BMPs) to correct nonpoint source problems on the farm. You can access Farm-A-Syst by going onto the Clemson Extension Service website: <http://www.clemson.edu/waterquality/FARM.HTM>.

NRCS provides financial and technical assistance to help South Carolina landowners address natural resource concerns, promote environmental quality, and protect wildlife habitat on property they own or control. The cost-share funds are available through the Environmental Quality Incentives Program (EQIP). EQIP helps farmers improve production while protecting environmental quality by addressing such concerns as soil erosion and productivity, grazing management, water quality, animal waste, and forestry concerns. EQIP also assists eligible small-scale farmers who have historically not participated in or ranked high enough to be funded in previous sign ups. Please visit www.sc.nrcs.usda.gov/programs/ for more information, including eligibility requirements.

Also available through NRCS, the Grassland Reserve Program (GRP) is a voluntary program offering landowners the opportunity to protect, restore and enhance grasslands on their property. NRCS and the Farm Service Agency (FSA) coordinate implementation of the GRP, which helps landowners restore and protect grassland, rangeland, pastureland, scrubland and certain other lands and provides assistance for rehabilitating grasslands. The program will conserve vulnerable grasslands from conversion to cropland or other uses and conserve valuable grasslands by helping maintain viable grazing operations. A grazing management plan is required for participants. NRCS has further information on their website for the GRP as well as additional programs such as the Conservation Reserve Program, Conservation Security Program, Farm and Ranch Lands Protection Program, etc. You can visit the NRCS website by going to: www.sc.nrcs.usda.gov/programs/.

6.1.5 Leaking Sanitary Sewers and Illicit Discharges

Leaking sanitary sewers and illicit discharges, although illegal and subject to enforcement may be occurring in regulated or unregulated portions of the watershed at any time. Due to the high concentration of pollutant loading that is generally associated with these discharges, their detection may provide a substantial improvement in overall water quality in the Big Branch watershed. Detection methods may include, but are not limited to: dye testing, air pressure testing, static pressure testing, and infrared photography.

SCDHEC recognizes illicit discharge detection and elimination activities are conducted by regulated MS4 entities as pursuant to compliance with existing MS4 permits. Note that these activities are designed to detect and eliminate illicit discharges that may contain FC bacteria. It is the intent of SCDHEC to work with the MS4 entities to recognize FC load reductions as they are achieved. SCDHEC acknowledges that these efforts to reduce illicit discharges and SSOs are ongoing and some reduction may already be accountable (i.e. load reductions occurring during TMDL development process). Thus, the implementation process is an iterative and adaptive process. Regular communication between all implementation stakeholders will result in successful remediation of controllable sources over time. As designated uses are restored, SCDHEC will recognize efforts of implementers where their efforts can be directly linked to restoration.

6.1.6 Failing Septic Systems

A septic system, also known as an onsite wastewater system, is defined as failing when it is not treating or disposing of sewage in an effective manner. The most common reason for failure is improper maintenance by homeowners. Untreated sewage water contains disease-causing bacteria and viruses, as well as unhealthy amounts of nitrate and other chemicals. Failed septic systems can allow untreated sewage to seep into wells, groundwater, and surface water bodies, where people get their drinking water and recreate. Pumping a septic tank is probably the single most important thing that can be done to protect the system. If the buildup of solids in the tanks becomes too high and solids move to the drainfield, this could clog and strain the system to the point where a new drainfield will be needed.

SCDHEC's Office of Coastal Resource Management (OCRM) has created a toolkit for homeowners and local governments which include tips for maintaining septic systems. These septic system Do's and Don'ts are as follows:

Do's:

- Conserve water to reduce the amount of wastewater that must be treated and disposed of by your system. Doing laundry over several days will put less stress on your system.
- Repair any leaking faucets or toilets. To detect toilet leaks, add several drops of food dye to the toilet tank and see if dye ends up in the bowl.
- Divert down spouts and other surface water away from your drainfield. Excessive water keeps the soil from adequately cleansing the wastewater.
- Have your septic tank inspected yearly and pumped regularly by a licensed septic tank contractor.

Don'ts:

- Don't drive over your drainfield or compact the soil in any way.
- Don't dig in your drainfield or build anything over it, and don't cover it with a hard surface such as concrete or asphalt.
- Don't plant anything over or near the drainfield except grass. Roots from nearby trees and shrubs may clog and damage the drain lines.
- Don't use your toilet as a trash can or poison your system and the groundwater by pouring harmful chemicals and cleansers down the drain. Harsh chemicals can kill the bacteria that help purify your wastewater.

For additional information on how septic systems work, how to properly plan and maintain a septic system, or to link to the OCRM toolkit mentioned above, please visit the DHEC Environmental Health Onsite Wastewater page at the following link: http://www.scdhec.gov/health/envhlth/onsite_wastewater/septic_tank.htm

6.1.7 Urban Runoff

Urban runoff is surface runoff of rainwater created by urbanization outside of regulated areas which may pick up and carry pollutants to receiving waters. Pavement, compacted areas, roofs, reduced tree canopy and open space increase runoff volumes that rapidly flow into receiving waters. This increase in volume and velocity of runoff often causes stream bank erosion, channel incision and sediment deposition in stream channels. In addition, runoff from these developed areas can increase stream temperatures that along with the increase in flow rate and pollutant loads negatively affect water quality and aquatic life (USEPA 2005). This runoff can pick up FC bacteria along the way. Many strategies currently exist to reduce FC loading from urban runoff and the USEPA nonpoint source pollution website provides extensive resources on this subject which can be accessed online at: <http://www.epa.gov/nps/urban.html>.

Some examples of urban nonpoint source BMPs are street sweeping, stormwater wetlands, pet waste receptacles (equipped with waste bags), and educational signs which can be installed adjacent to receiving waters in the watershed such as parks, common areas, apartment complexes, trails, etc. Low impact development (LID) may also be effective. LID is an approach to land development (or re-development) that works with nature to manage stormwater as close to its source as possible. LID employs principles such as preserving and recreating natural landscape features, minimizing effective imperviousness to create functional and appealing site drainage that treats stormwater as a resource rather than a waste product. There are many practices that have been used to adhere to these principles such as bioretention facilities, rain gardens, vegetated rooftops, rain barrels, and permeable pavements (USEPA, 2009).

Some additional urban BMPs that can be adopted in public parks are doggy doileys and pooch patches. Doggy doileys are disposal units, which act like septic systems for pet waste, and are installed in the ground where decomposition can occur (USEPA, 2001). This requires that pet owners place the waste into the disposal units. Although the Big Branch watershed is rural in nature, many of the urban runoff practices discussed in this section can be applied to individual households in the watershed. Education should be provided to individual homeowners in the referenced watershed on the contributions to FC loading from pet waste. Education to homeowners in the watershed on the fate of substances poured into storm drain inlets should also be provided. For additional information on urban runoff please see the SCDHEC Nonpoint Source Runoff Pollution homepage at <http://www.scdhec.gov/environment/water/npspage.htm>.

Clemson Extension's Home-A-Syst handbook can also help homeowners reduce sources of NPS pollution on their property. This document guides homeowners through a self-assessment of their property and can be accessed online at: <http://www.clemson.edu/waterquality/HOMASYS.HTM>

7.0 RESOURCES FOR POLLUTION MANAGEMENT

This section provides a listing of available resources to aid in the mitigation and control of pollutants. There are examples from across the nation, most of which are easily accessible on the World Wide Web.

7.1 General for Urban and Suburban Stormwater Mitigation

- National Management Measures to Control Nonpoint Source Pollution from Urban Areas – Draft. 2002. EPA842-B-02-003. Available at: <http://www.epa.gov/owow/nps/urbanmm/index.html>
- Stormwater Management Volume Two: Stormwater Technical Manual. Massachusetts Department of Environmental Management. 1997. Available at: <http://www.mass.gov/dep/brp/stormwtr/stormpub.htm>
- Fact Sheets for the six minimum control measures for storm sewers regulated under Phase I or Phase II. Available at: http://cfpub1.epa.gov/npdes/stormwater/swfinal.cfm?program_id=6
- A Current Assessment of Urban Best Management Practices. 1992. Metropolitan Washington Council of Governments. Washington, DC
- Controlling Urban Runoff: A Practical Manual for Planning and Designing Urban BMPs. 1987. Metropolitan Washington Council of Governments. Washington, DC
- 2004 Stormwater Quality Manual. Connecticut Department of Environmental Protection 2004. Available at: <http://dep.state.ct.us/wtr/stormwater/strmwtrman.htm>

- Stormwater Treatment BMP New Technology Report. California Department of Transportation. 2004. SW-04-069-.04.02 Available at: http://www.dot.ca.gov/hq/env/stormwater/special/newsetup/_pdfs/new_technology/CTSW-RT-04-069.pdf
- Moonlight Beach Urban Runoff Treatment facility: Using Ultraviolet Disinfection to Reduce Bacteria Counts. Rasmus, J. and K. Weldon. 2003. StormWater, May/June 2003. Available at http://www.forester.net/sw_0305_moonlight.html
- Operation, Maintenance, and Management of Stormwater Management Systems. Livingston, Shaver, Skupien, and Horner. August 1997. Watershed Management Institute. Call: (850) 926-5310.
- Model Ordinances to Protect Local Resources – Stormwater Control Operation and Maintenance. USEPA Webpage: <http://www.epa.gov/owow/nps/ordinance/stormwater.htm>
- Stormwater O & M Fact Sheet Preventive Maintenance. USEPA 1999. 832-F-99-004. Available at: <http://www.epa.gov/owm/mtb/prevmain.pdf>
- The MassHighway Stormwater Handbook. Massachusetts Highway Department. 2004. Available at: <http://166.90.180.162/mhd/downloads/projDev/swbook.pdf>
- University of New Hampshire Stormwater Center: Dedicated to the protection of water resources through effective stormwater management. Available at: <http://www.unh.edu/erg/cstev/index.htm#>
- EPA's Stormwater website: <http://www.epa.gov/region1/topics/water/stormwater.html>

7.2 Illicit Discharges

- Illicit Discharge Detection and Elimination Manual - A Handbook for Municipalities. 2003. New England Interstate Water Pollution Control Commission. Available at: http://www.neiwppcc.org/PDF_Docs/iddmanual.pdf
- Model Ordinances to Protect Local Resources – Illicit Discharges. USEPA webpage: <http://www.epa.gov/owow/nps/ordinance/discharges.htm>

7.3 Pet Waste

- National Management Measure to Control Non Point Source Pollution from Urban Areas – Draft. USEPA 2002. EPA 842-B-02-2003. Available from: <http://www.epa.gov/owow/nps/urbanmm/index.html>
- Septic Systems for Dogs? Nonpoint Source News-Notes 63. Pet Waste: Dealing with a Real Problem in Suburbia. Kemper, J. 2000. New Jersey Department of Environmental Protection. Available from: http://www.state.nj.us/dep/watershedmgt/pet_waste_fredk.htm
- Stormwater Manager's Resource Center. Schueler, T., Center for Watershed Protection, Inc. <http://www.stormwatercenter.net>
- Guidance Specifying Management Measures for Sources of Nonpoint Pollution in Coastal Waters. U.S. EPA, Office of Water 1993. Washington, DC.

- National Menu of Best Management Practices for Stormwater Phase II. USEPA. 2002. Available at: <http://www.epa.gov/npdes/menuofbmps/menu.htm>
- Welcome to NVRC'S Four Mile Run Program. NVRC 2001. Available at: <http://www.novaregion.org/fourmilerun.htm>
- Boston's ordinance on dog waste. City of Boston Municipal Codes, Chapter XVI. 16-1.10A Dog Fouling. Available at: http://www.amlegal.com/boston_ma/
- Pet Waste and Water Quality. Hill, J.A., and D. Johnson. 1994. University of Wisconsin Extension Service. <http://cecommerce.uwex.edu/pdfs/GWQ006.PDF>
- Long Island Sound Study. Pet Waste Poster. EPA. Available at: <http://www.longislandsoundstudy.net/pubs/misc/pet.html>
- Source Water Protection Practices Bulletin: Managing Pet and Wildlife Waste to Prevent Contamination of Drinking Water. USEPA. 2001. EPA 916-F-01-027. Available at: <http://www.epa.gov/safewater/protect/pdfs/petwaste.pdf>

7.4 Wildlife

- An example of a bylaw prohibiting the feeding of wildlife: Prohibiting Feeding of Wildlife. Town of Bourne Bylaws Section 3.4.3. Available at: http://www.townofbourne.com/Town%20Offices/Bylaws/chapter_3.htm
- Integrated Management of Urban Canadian Geese. M Underhill. 1999. Conference Proceedings, Waterfowl Information Network.
- Urban Canadian Geese in Missouri. Missouri Conservationist Online. Available at: <http://www.conservation.state.mo.us/conmag/2004/02/20.htm>

7.5 Septic Systems

- National Management Measures to Control Nonpoint Source Pollution from Urban Areas – Draft. Chapter 6. New and Existing Onsite Wastewater Treatment Systems. USEPA 2002. EPA842-B-02-003. Available at: <http://www.epa.gov/owow/nps/urbanmm/index.html>
- Septic Systems. USEPA Webpage: <http://cfpub.epa.gov/owm/septic/home.cfm>

7.6 Field Application of Manure

- Conservation Standard Practice-Irrigation Water Management. Number 449. United States Department of Agriculture (USDA) Natural Resources Conservation Service. 2003. Available at: <http://www.nrcs.usda.gov/technical/Standards/nhcp.html>
- Conservation Standard Practice-Filter Strip. Number 393. USDA Natural Resources Conservation Service (NRCS). 2003. Available at: <http://www.nrcs.usda.gov/technical/Standards/nhcp.html>
- Buffer Strips: Common Sense Conservation. USDA Natural Resource Conservations Service. No Date. Website. Available at: <http://www.nrcs.usda.gov/feature/buffers/>

- Conservation Standard Practice-Riparian Forest Buffer. Number 391. USDA Natural Resource Conservation Service. 2003. Available at:
<http://www.nrcs.usda.gov/technical/Standards/nhcp.html>
- Conservation Standard Practice-Riparian Herbaceous Cover. Number 390 USDA Natural Resource Conservation Service. 2003. Available at:
<http://www.nrcs.usda.gov/technical/Standards/nhcp.html>

7.7 Grazing Management

- Conservation Standard Practice-Stream Crossing. Number 578. USDA Natural Resource Conservation Service. 2003. Available at:
<http://www.nrcs.usda.gov/technical/Standards/nhcp.html>
- Guidance Specifying Management Measures for Nonpoint Source Pollution in Coastal Waters. Chapter 2. Management Measures for Agricultural Sources. Grazing Management. USEPA. Available at: <http://www.epa.gov/owow/nps/MMGI/Chapter2/ch2-2e.html>

7.8 Animal Feeding Operations and Barnyards

- National Management Measures to Control Nonpoint Source Pollution from Agriculture. USEPA 2003. Report: EPA 841-B-03-004. Available at:
<http://www.epa.gov/owow/nps/agmm/index.html>
- Livestock Manure Storage. Software designed to assess the threat to ground and surface water from manure storage facilities. USEPA. Available at: <http://www.epa.gov/seahome/manure.html>
- National Engineering Handbook Part 651. Agricultural Waste Management Field Handbook. NRCS. Available At: <http://www.wcc.nrcs.usda.gov/awm/awmfh.html>
- Animal Waste Management. NRCS website: <http://www.wcc.nrcs.usda.gov/awm/>
- Animal Waste Management Software. A tool for estimating waste production and storage requirements. Available at: <http://www.wcc.nrcs.usda.gov/awm/awm.html>
- Manure Management Planner. Software for creating manure management plans. Available at: <http://www.agry.purdue.edu/mmp/>
- Animal Feeding Operations Virtual Information Center. USEPA website:
<http://cfpub.epa.gov/npdes/afo/virtualcenter.cfm>

7.9 Federal Agriculture Resources: Program Overviews, Technical Assistance, and Funding

- USDA-NRCS assists landowners with planning for the conservation of soil, water, and natural resources. Local, state, and federal agencies and policymakers also rely on NRCS expertise. Cost shares and financial incentives are available in some cases. Most work is done with local partners. The NRCS is the largest funding source for agricultural improvements. To find out about potential funding, see: <http://www.ma.nrcs.usda.gov/programs/>. To pursue obtaining funding, contact a local NRCS coordinator. Contact information is available at:
http://www.ma.nrcs.usda.gov/contact/employee_directory.html

- NRCS provides a wealth of information and BMP fact sheets tailored to agricultural and conservation practices through the NRCS Electronic Field Office Technical Guide at: http://efotg.nrcs.usda.gov/efotg_locator.aspx?map=SC
- The 2002 USDA Farm Bill (<http://www.nrcs.usda.gov/programs/farbill/2002/>) provides a variety of programs related to conservation. Information can be found at: <http://www.nrcs.usda.gov/programs/farbill/2002/products.html>. The following programs can be linked to from the USDA Farm Bill website:
 - Conservation Security Program (CSP): <http://www.nrcs.usda.gov/programs/csp/>
 - Conservation Reserve Program (CRP): <http://www.nrcs.usda.gov/programs/crp/>
 - Wetlands Reserve Program (WRP): <http://www.nrcs.usda.gov/programs/wrp/>
 - Environmental Quality Incentives Program (EQIP): <http://www.nrcs.usda.gov/programs/eqip/>
 - Grassland Reserve Program (GRP): <http://www.nrcs.usda.gov/programs/GRP/>
 - Conservation of Private Grazing Land Program (CPGL): <http://www.nrcs.usda.gov/programs/cpgl/>
 - Wildlife Habitat Incentives Program (WHIP): <http://www.nrcs.usda.gov/programs/whip/>
 - Farm and Ranch Land Protection Program (FRPP): <http://www.nrcs.usda.gov/programs/frpp/>
 - Resource Conservation and Development Program (RC&D): <http://www.nrcs.usda.gov/programs/rcd/>
- CORE4 Conservation Practices. The common sense approach to natural resource conservation. USDA-NRCS (1999). This manual is intended to help USDA-NRCS personnel and other conservation and nonpoint source management professionals implement effective programs using four core conservation practices: conservation tillage, nutrient management, pest management, and conservation buffers, available at: <http://www.nrcs.usda.gov/technical/ECS/agronomy/core4.pdf>
- County soil survey maps are available from NRCS at: <http://soils.usda.gov>
- Guidance Specifying Management Measures for Sources of Nonpoint Pollution in Coastal Waters. U.S. EPA, Office of Water (1993). Developed for use by State Coastal Nonpoint Pollution Control Programs, Chapter 2 of this document covers erosion control, animal feeding operation management, grazing practices, and management of nutrients, pesticides, and irrigation water, available at: <http://www.epa.gov/owow/nps/MMGI/Chapter2/index.html>.
- Farm-A-Syst is a partnership between government agencies and private business that enables landowners to prevent pollution on farms, ranches, and in homes using confidential environmental assessments, available at: <http://www.uwex.edu/farmasyst/>
- State Environmental Laws Affecting South Carolina Agriculture: A comprehensive assessment of regulatory issues related to South Carolina agriculture has been compiled by the National Association of State Departments, available at: <http://www.nasdaq.org/nasdaq/nasdaq/Foundation/state/states.htm>
- Waterborne Pathogens in Agricultural Wastewater. Rosen, B. H., 2000. USDA, NRCS, Watershed Science Institute. Available at: ftp://ftp-fc.sc.egov.usda.gov/WSI/pdffiles/Pathogens_in_Agricultural_Watersheds.pdf

8.0 REFERENCES AND BIBLIOGRAPHY

- American Society of Agricultural Engineers (ASAE). 1998. ASAE Standards, 45th edition. D384.1 DEC93. Manure production and characteristics St. Joseph, Mich.
- American Society of Agricultural and Biological Engineers (ASABE). 1997. Off-Stream Water Sources for Grazing Cattle as a Stream Bank Stabilization and Water Quality BMP. *Transactions of the ASAE*, Vol. 40(3): 595-604
- American Society of Agricultural and Biological Engineers (ASABE). 1998. Vegetative Filter Strip Removal of Cattle Manure Constituents in Runoff. *Transactions of the ASAE*, Vol. 41(5): 1375-1381
- Ayres Associates 1993. Onsite Sewage Disposal Systems Research in Florida. The Capacity of Fine Sandy Soil for Septic Tank Effluent Treatment: A Field Investigation at an In-Situ Lysimeter Facility in Florida.
- Bonta, J.V. and B. Cleland. 2003. Incorporating Natural Variability, Uncertainty, and Risk into Water Quality Evaluations Using Duration Curves. *Journal of American Water Resource Association* 39(12): 1481-1496
- Gaffield, S. J., R. L. Goo, L.A. Richards, and R. J. Jackson. 2003. Public Health Effects of Inadequately Managed Stormwater. *American Journal of Public Health* 93(9): 1527-1533. September 2003.
- Metcalf and Eddy 1991. Wastewater Engineering: Treatment, Disposal, Reuse. Third Edition.
- National Land Cover Data Set (NLCD). 2001. Nation-wide Landsat-7 Imagery 1999. Available through the Multi-Resolution Land Characteristics (MRLC) Consortium. <http://www.mrlc.gov/>
- Novotny, V., K.R. Imhoff, M. Olthof, and P.A. Krenkel. 1989. Karl Imhoff's Handbook of Urban Drainage and Wastewater Disposal. Wiley, New York.
- Schueler, T. R. 1987. Controlling Urban Runoff: A Practical Manual for Planning and Designing Urban BMPs. Publ. No. 87703. Metropolitan Washington Council of Governments, Washington, DC.
- Schueler, T. R. 1999. Microbes and Urban Watersheds: Concentrations, Sources, and Pathways. *Watershed Protection Techniques* 3(1): 554-565.
- South Carolina Department of Health and Environmental Control. 1998. Implementation Plan for Achieving Total Maximum Daily Load Reductions from Nonpoint Sources for the State of South Carolina.
- South Carolina Department of Health and Environmental Control. 2002. Standards for the Permitting of Agricultural Animal Facilities (Regulation 61-43). Bureau of Water. Columbia, SC
- South Carolina Department of Health and Environmental Control. 2003. Water Pollution Control Permits (Regulation 61-9) Office of Environmental Quality Control, Columbia, SC.
- South Carolina Department of Health and Environmental Control. 2004. Classified Waters (R.61-68). Amended June 28, 2004. Printed April 2005; 36pp.
- South Carolina Department of Health and Environmental Control. 2004. Watershed Water Quality Assessment: Saluda River Basin. Technical Report No. 004-04.
- South Carolina Department of Natural Resources. 2008. South Carolina Deer Density 2008. Electronic Version: Available at: <http://www.dnr.sc.gov/wildlife/deer/deermap.html>

- Stormwater Program (Phase II); Municipal Sewer Systems and Construction Sites, 64 Federal Register 235 (8 December 1999), pp. 68837.
- United States Department of Agriculture (USDA). 2007 (Updated December 2009). National Agriculture Statistics Service. 2007 Census of Agriculture South Carolina State and County Data. Vol: 1. Geographic Area Series. Part 40. Available electronically at:
http://www.agcensus.usda.gov/Publications/2007/Full_Report/Volume_1,_Chapter_2_County_Level/South_Carolina/scv1.pdf
- United States Environmental Protection Agency (USEPA). 1986. Ambient water quality criteria for bacteria – 1986. Office of Water, EPA-A440/5-84-002.
- United States Environmental Protection Agency (USEPA). 1991. Guidance for Water Quality-Based Decisions: The TMDL Process. Office of Water, EPA 440/4-91-001.
- United States Environmental Protection Agency (USEPA). 2001. Protocol for Developing Pathogen TMDLs. First Edition. Office of Water, EPA 841-R-00-002.4
- United States Environmental Protection Agency (USEPA). 2001 Managing Pet and Wildlife Waste to Prevent Contamination of Drinking Water. EPA 916-F-01-027. Available at
http://www.epa.gov/safewater/sourcewater/pubs/fs_swpp_petwaste.pdf
- United States Environmental Protection Agency (USEPA). 2005. National Pollutant Discharge Elimination System (NPDES). Available at http://cfpub.epa.gov/npdes/home.cfm?program_id=6
- United States Geological Survey (USGS). 2008. Water-Resources Real-time Data South Carolina Water Year. United States Geological Survey. Available at <http://waterdata.usgs.gov/nw>
- Water Quality Planning and Management, Title 40 Code of Federal Regulations, Pt. 130.2(i). 2006 ed.
- Yagow, G. 1999. Unpublished monitoring data. Mountain Run TMDL Study. Submitted to Virginia Department of Environmental Quality. Richmond, Virginia.
- Wise, Karl. J., et al. 2002. Results of the AVMA Survey on Companion Animal Ownership in US Pet-Owning Households. Journal of the American Veterinary Medical Association, Vol. 221(11): 1572-1573

Appendix A

DATA TABLES

90th Percentile Fecal Coliform Concentrations (#/100 mL)

Hydro Categ Range	High Flow 0-10	Moist Cond. 10-40	Mid Range 40-60	Dry Flow 60-90	Low Flow 90-100	Samples
CW-243	2640	1550	1152	1080	0	52

Mid Point Hydrologic Category Flow (cfs)

Hydro Categ (Mid-Point)	High Flow (7)	Moist Cond. (16)	Mid Range (12)	Dry (17)	Low Flow (0)
CW-243	38.7	8.47	3.63	1.63	0.38

Existing Load (#/day)

Hydro Categ (Mid-Point)	High Flow (7)	Moist Cond. (16)	Mid Range (12)	Dry (17)	Low Flow (0)
CW-243	2.50E+12	3.21E+11	1.02E+11	4.31E+10	0.00E+00

Target Load (#/day)

Hydro Categ (Mid-Point)	High Flow (7)	Moist Cond. (16)	Mid Range (12)	Dry (17)	Low Flow (0)
CW-243	3.79E+11	8.28E+10	3.55E+10	1.60E+10	3.74E+09

Load Reduction Necessary (#/day)

Hydro Categ (Mid-Point)	High Flow (7)	Moist Cond. (16)	Mid Range (12)	Dry (17)	Low Flow (0)
CW-243	2.12E+12	2.38E+11	6.68E+10	2.72E+10	N/A

% Load Reduction Necessary

Hydro Categ (Mid-Point)	High Flow (7)	Moist Cond. (16)	Mid Range (12)	Dry (17)	Low Flow (0)
CW-243	N/A	75	67	65	N/A

Appendix B

**PHOTOGRAPHS FROM THE WINDSHIELD SURVEY CONDUCTED
ON MARCH 31, 2008**

Plate 1: View of Big Branch over a bridge.



Plate 2: Another view of the Big Branch.



Plate 3: Another view of agricultural land within the Big Branch watershed.



Plate 4: Beaver dams in the Big Branch.



Plate 5: Sign advertising a duck and fish pond in Big Branch watershed.



Plate 6: Macrophytes in Big Branch.



Plate 7: At Station CW-243, a splash made by a beaver disappearing into the water.



Appendix C

EVALUATING THE PROGRESS OF MS4 PROGRAMS

Evaluating the Progress of MS4 Programs: Meeting the Goals of TMDLs and Attaining Water Quality Standards

Bureau of Water

August 2008

Described below are potential approaches that may be used by MS4 permit holders. These are recommendations and examples only, as SCDHEC-BOW recognizes that other approaches may be utilized or employed to meet compliance goals.

1. Calculate pollutant load reduction for each best management practice (BMP) deployed:
 - Retrofitting stormwater outlets
 - Creation of green space
 - LID activities (e.g., creation of porous pavements)
 - Creations of riparian buffers
 - Stream bank restoration
 - Scoop the poop program (how many pounds of poop were scooped/collected)
 - Street sweeping program (amount of materials collected etc.)
 - Construction & post-construction site runoff controls
2. Description & documentation of programs directed towards reducing pollutant loading
 - Document tangible efforts made to reduce impacts to urban runoff
 - Track type and number of structural BMPs installed
 - Parking lot maintenance program for pollutant load reduction
 - Identification and elimination of illicit discharges
 - Zoning changes and ordinances designed to reduce pollutant loading
 - Modeling of activities & programs for reducing pollutant reductions
3. Description & documentation of social indicators, outreach, and education programs
 - Number/Type of training & education activities conducted and survey results
 - Activities conducted to increase awareness and knowledge – residents, business owners. What changes have been made based on these efforts? Any measured behavior or knowledge changes?
 - Participation in stream and/or lake clean-up events or activities
 - Number of environmental action pledges
4. Water quality monitoring: A direct and effective way to evaluate the effectiveness of stormwater management plan activities.

- Use of data collected from existing monitoring activities (e.g., SCDHEC data for ambient monitoring program available through STORET; water supply intake testing; voluntary watershed group's monitoring, etc)
- Establish a monitoring program for permitted outfalls and/or waterbodies within MS4 areas as deemed necessary– use a certified lab
- Monitoring should focus on water quality parameters and locations that would both link pollutant sources and BMPs being implemented

5. Links:

- Evaluating the Effectiveness of Municipal Stormwater Programs. September 2007. EPA 833-F-07-010
- The BMP database - <http://www.bmpdatabase.org/BMPPerformance.htm> (this link is specifically to the BMP performance page, and lot more)
- EPA's STORET data warehouse - http://www.epa.gov/storet/dw_home.html
- EPA Region 5: STEPL – Spreadsheet tool for estimating pollutant loads <http://it.tetratex.com/stepl/>
- Measurable goals guidance for Phase II Small MS4 - <http://cfpub.epa.gov/npdes/stormwater/measurablegoals/index.cfm>
- Environmental indicators for stormwater program- <http://cfpub.epa.gov/npdes/stormwater/measurablegoals/part5.cfm>
- National menu of stormwater best management practices (BMPs) - <http://cfpub.epa.gov/npdes/stormwater/menuofbmps/index.cfm>
- SCDHEC – BOW: 319 grant program has attempted to calculate the load reductions for the following BMPs:
 - Septic tank repair or replacement
 - Removing livestock from streams (cattle, horses, mules)
 - Livestock fencing
 - Waste Storage Facilities (aka stacking sheds)
 - Strip cropping
 - Prescribed grazing
 - Critical Area Planting
 - Runoff Management System
 - Waste Management System
 - Solids Separation Basin
 - Riparian Buffers